



Uživatelský návod pro

bezrámové pantové zástěny

# Vitra Line

BN 1215 L

BN 1315 L


BN 1415 L












**Polysan s.r.o**  
Nesměřice 52  
285 22 Zruč nad Sázavou


[www.polysan.cz](http://www.polysan.cz)  
[www.polysan.net](http://www.polysan.net)

e-mail: [info@polysan.net](mailto:info@polysan.net)


tel.: +420 327 585 983  
fax.: +420 327 585 989

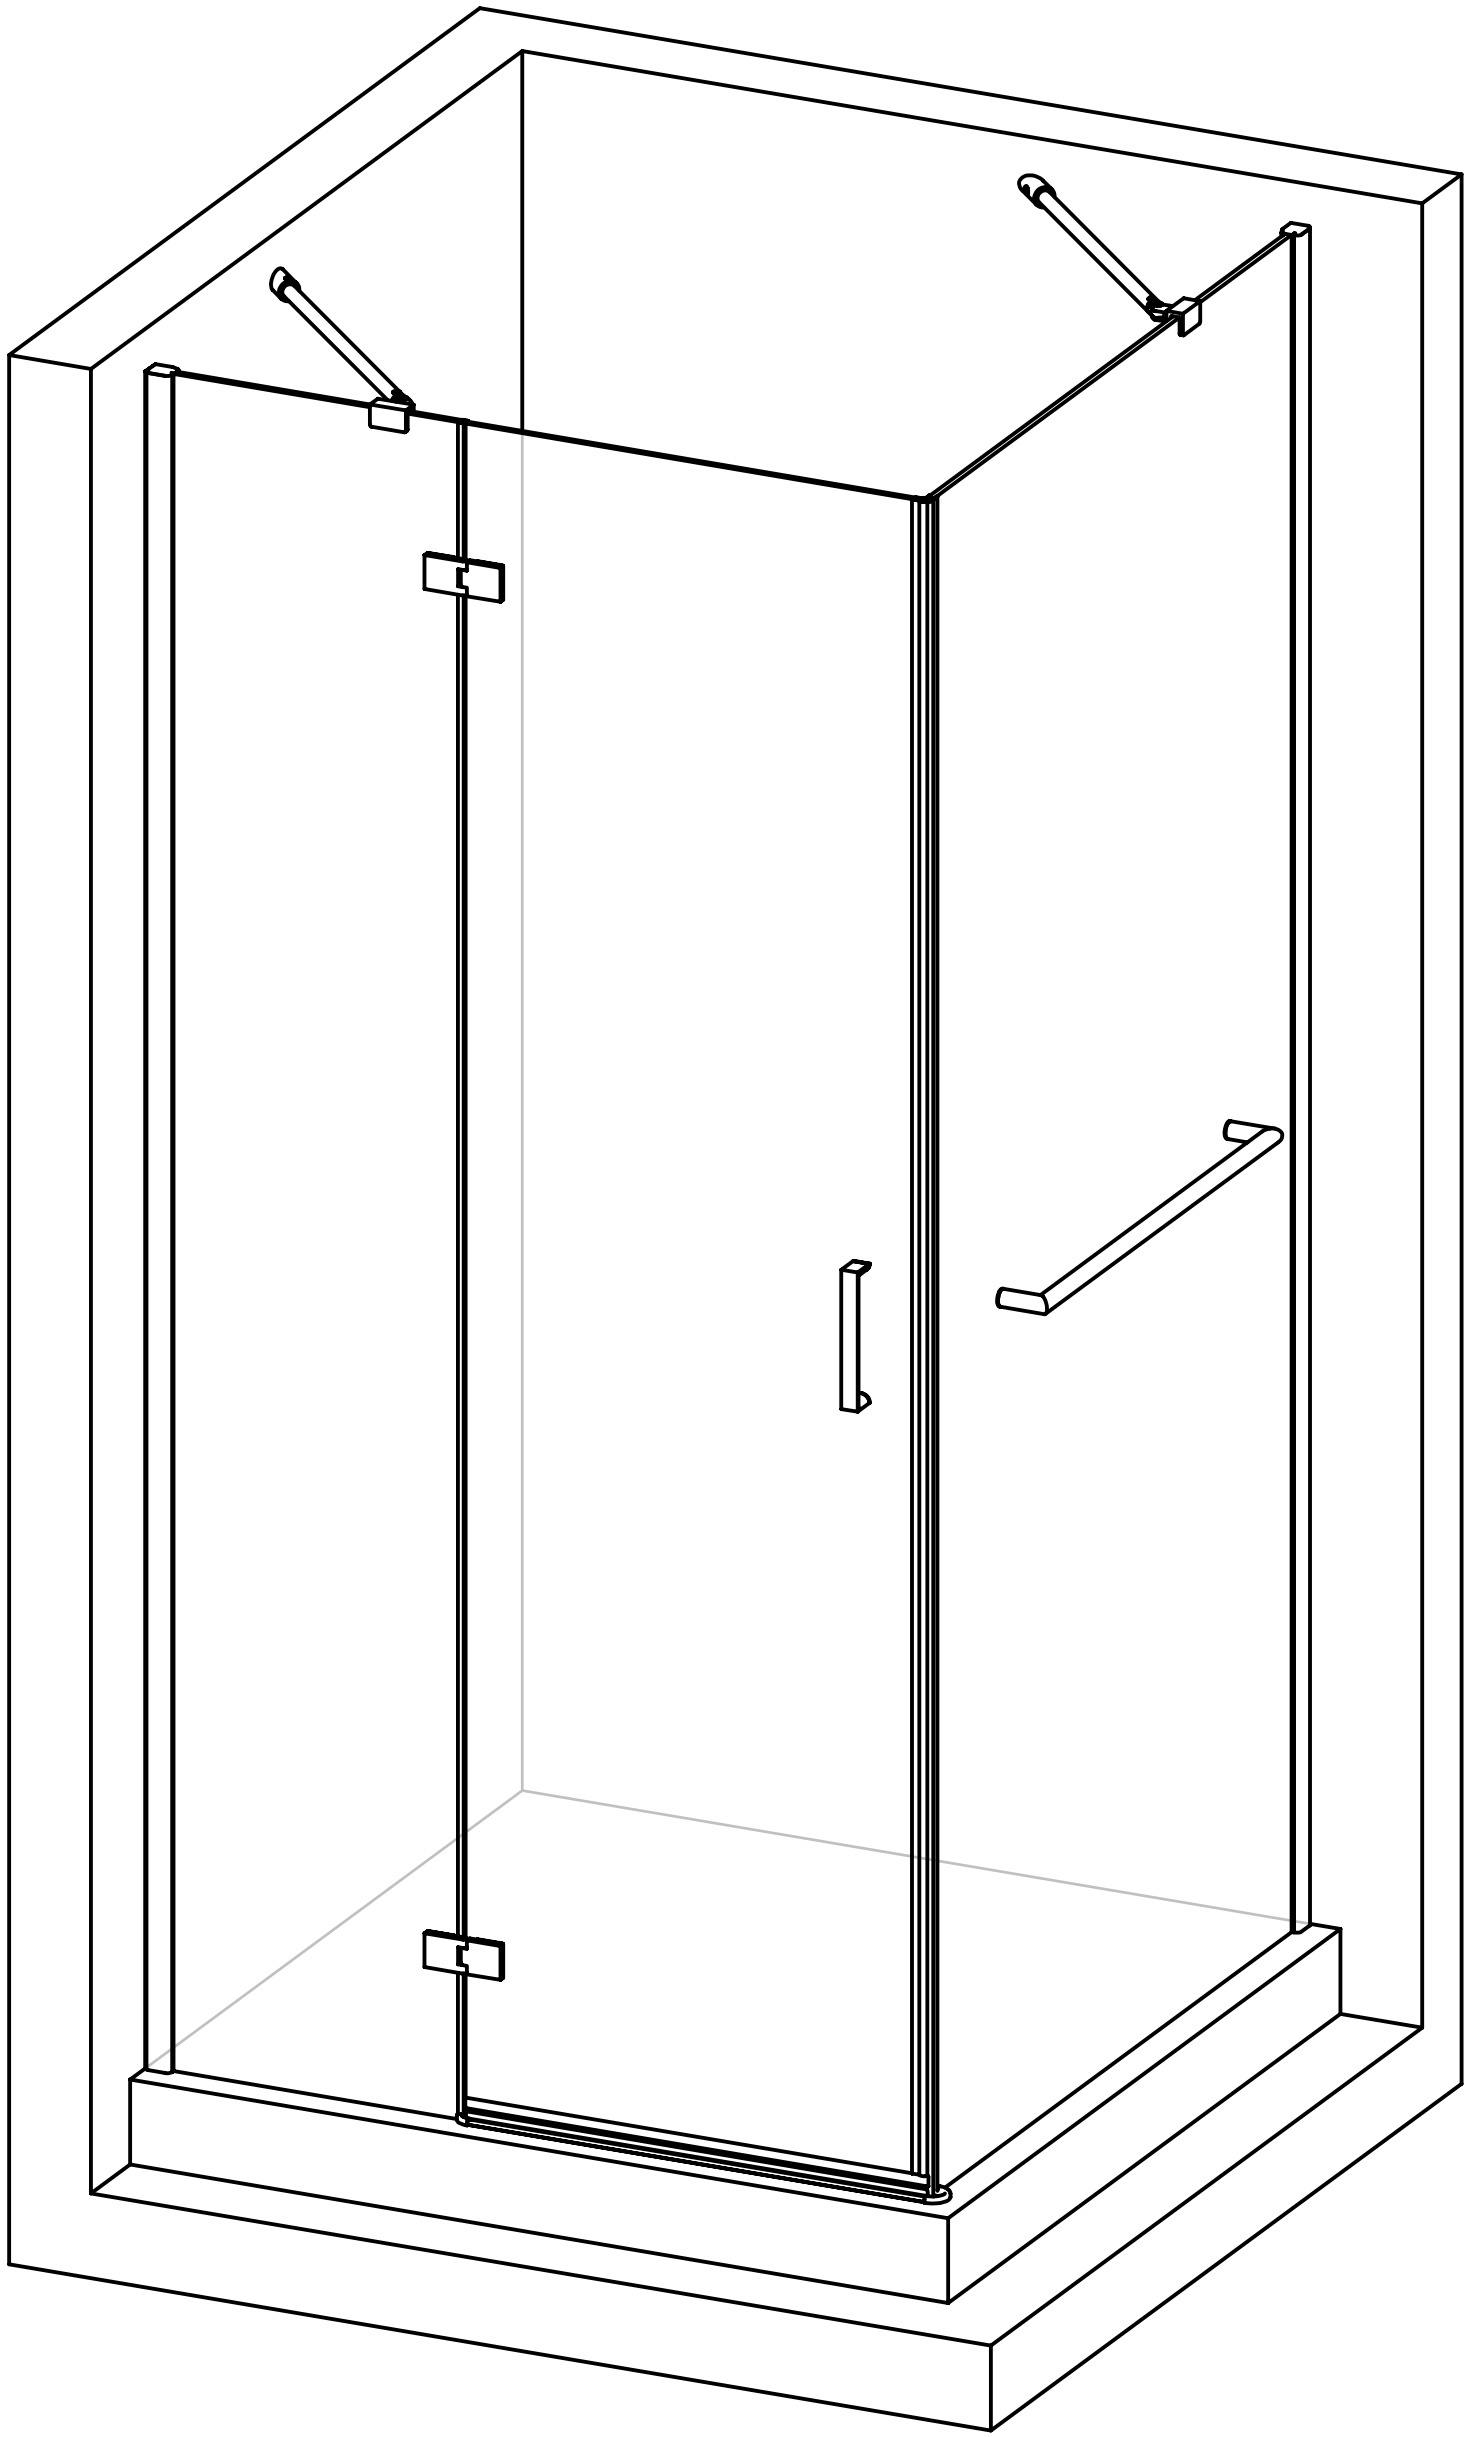

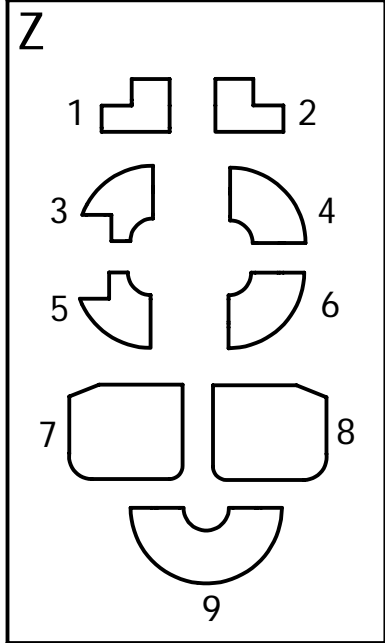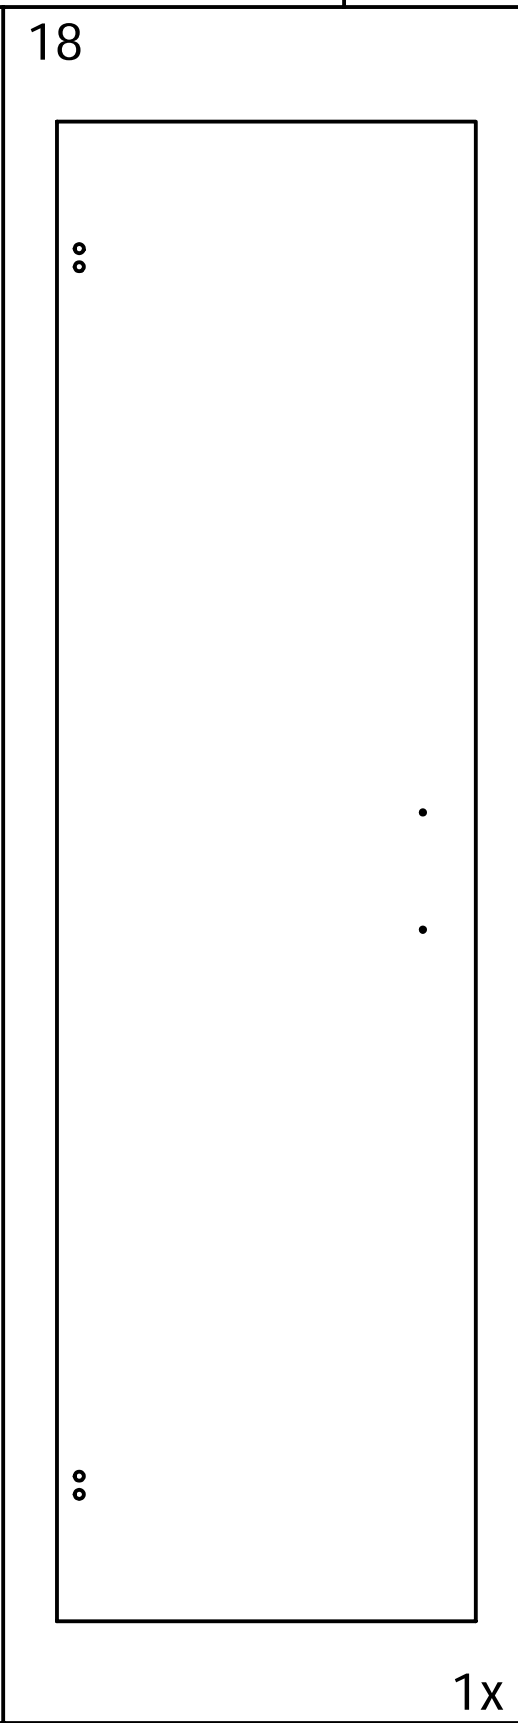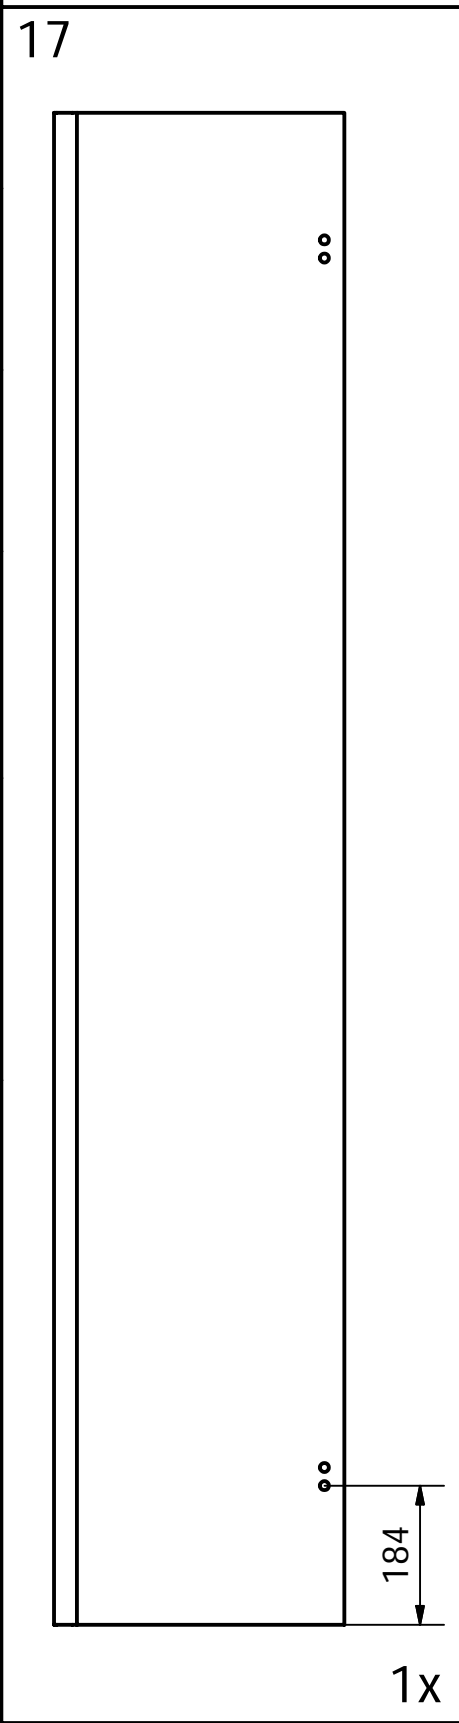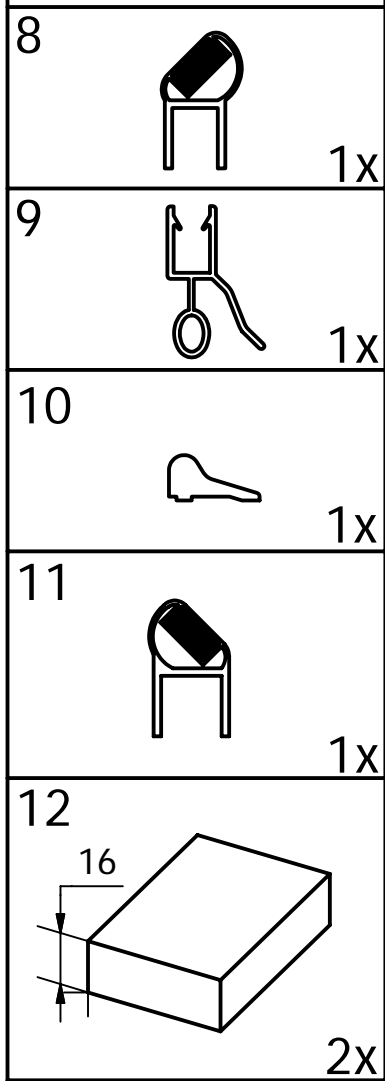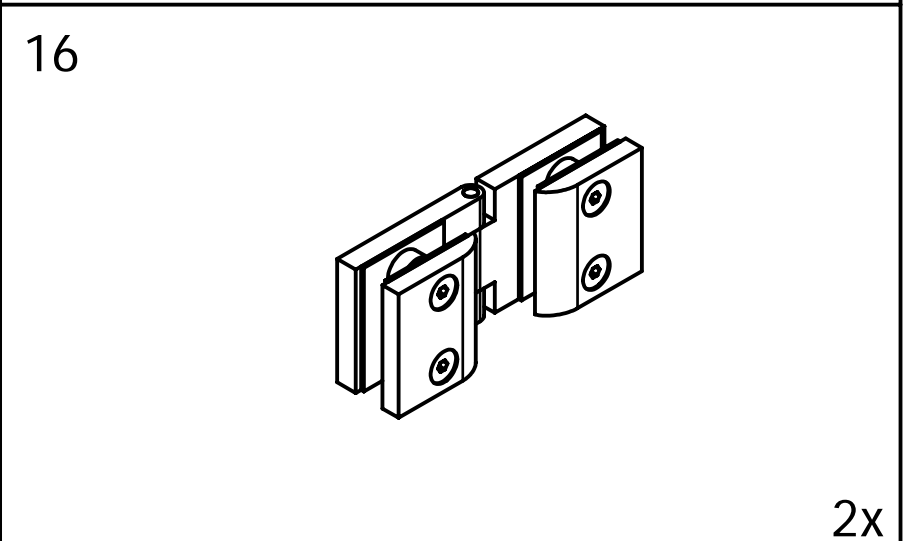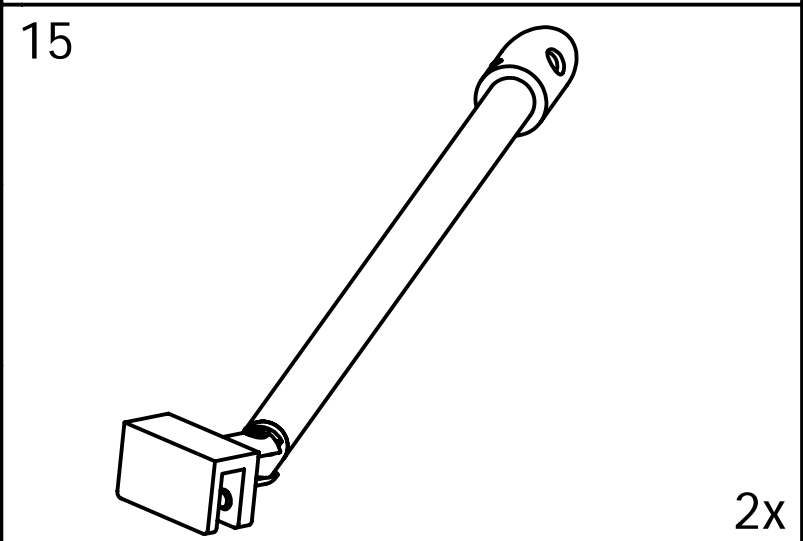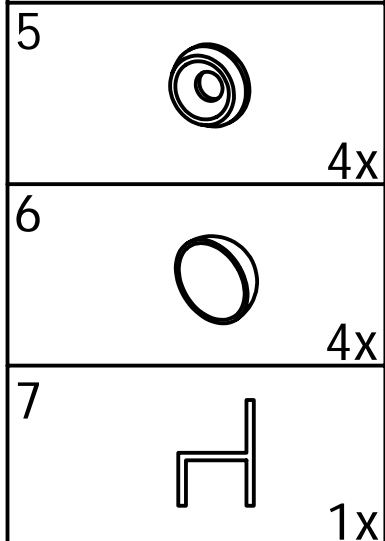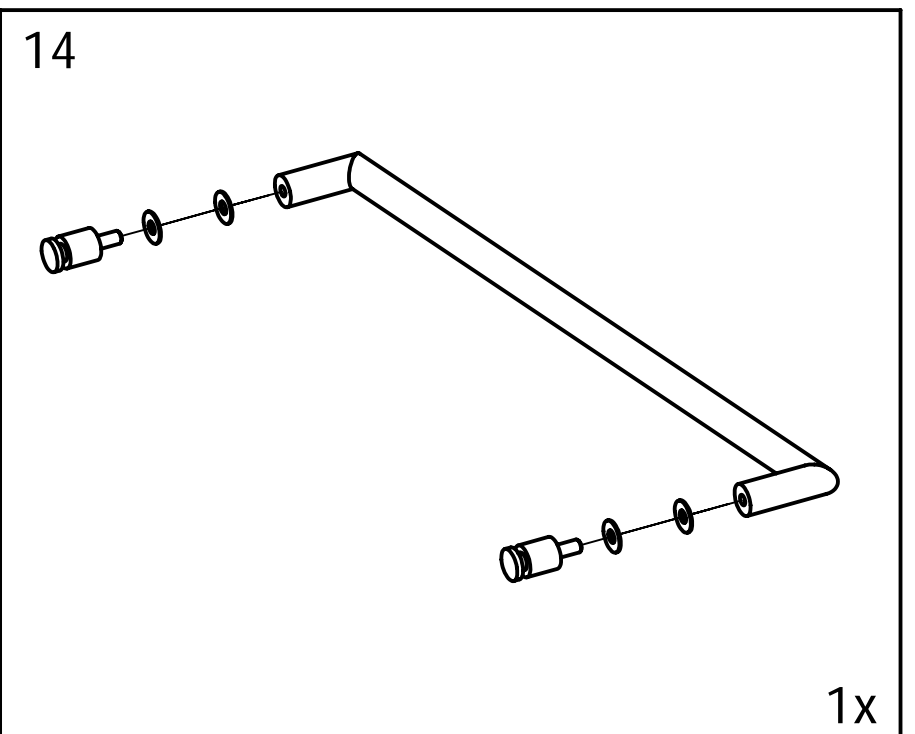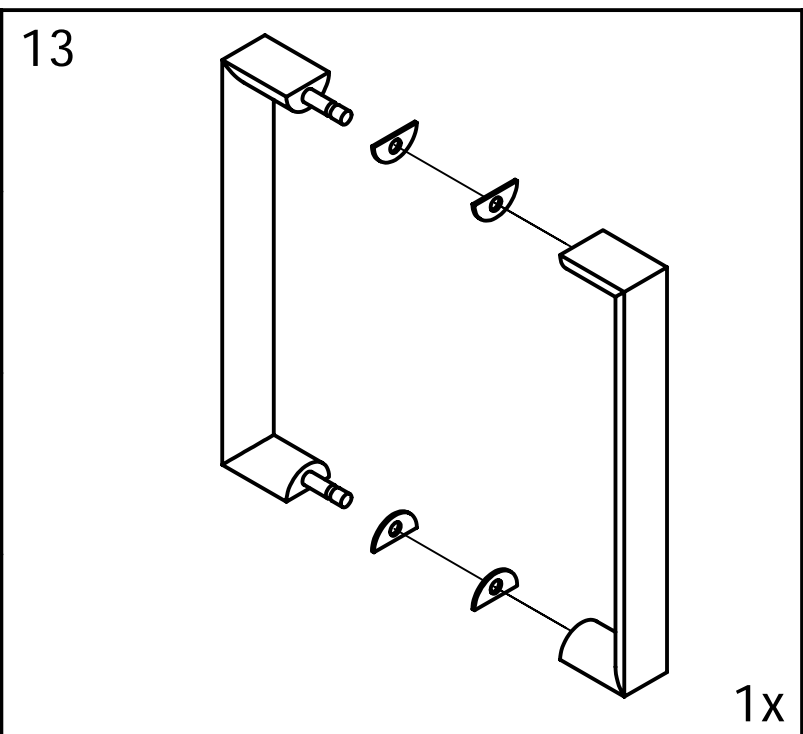
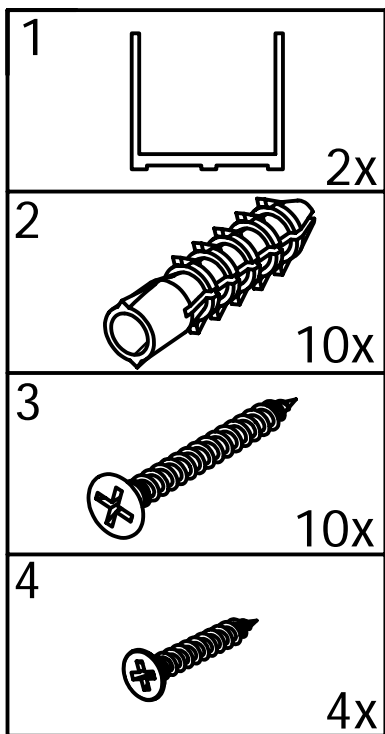


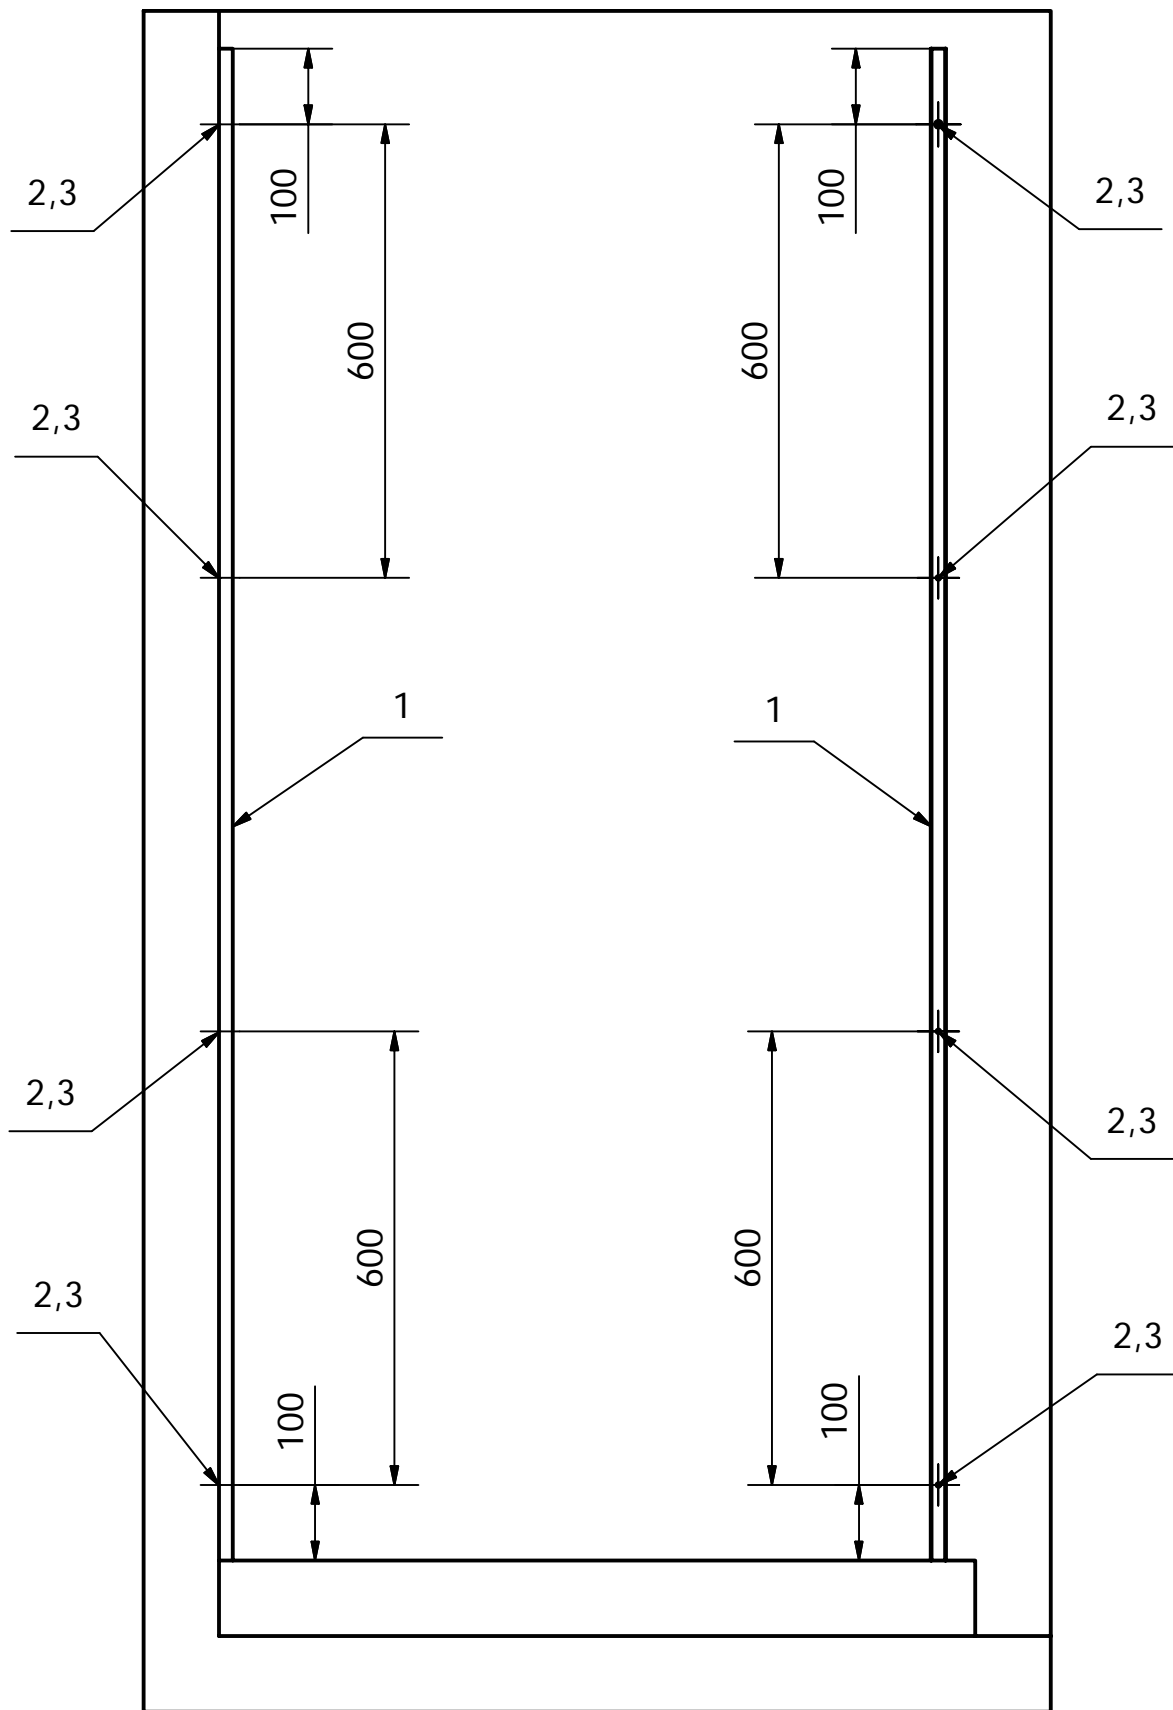


| TYP       | X   | Y   |
|-----------|-----|-----|
| BN 1215 L | 750 | 750 |
| BN 1315 L | 850 | 850 |
| BN 1415 L | 950 | 950 |

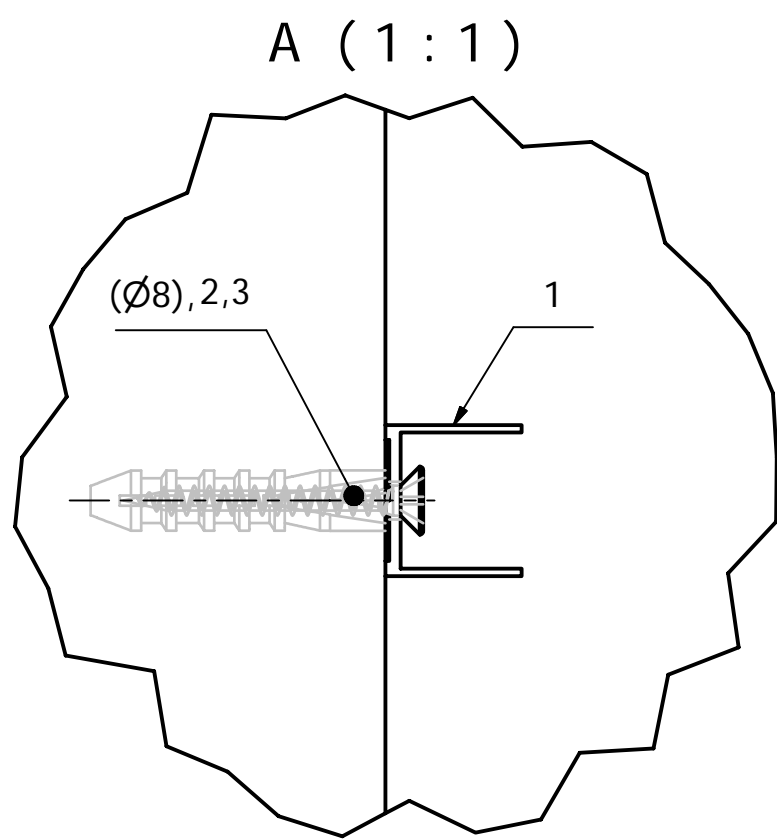


B (1:1)

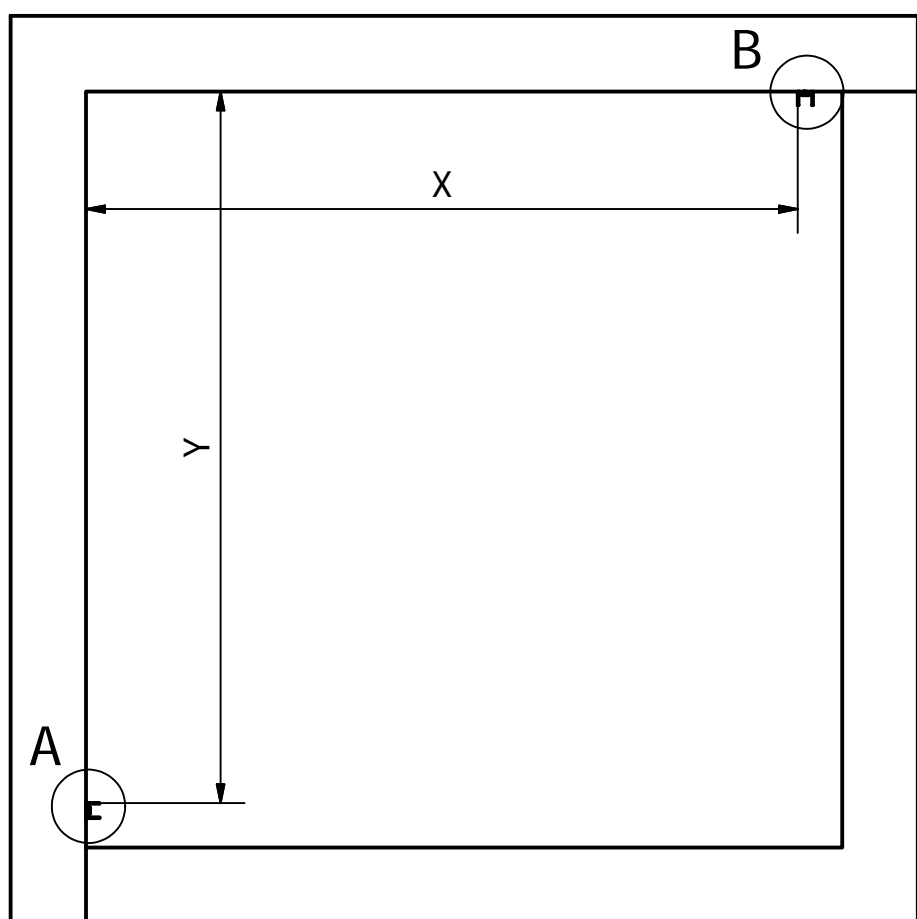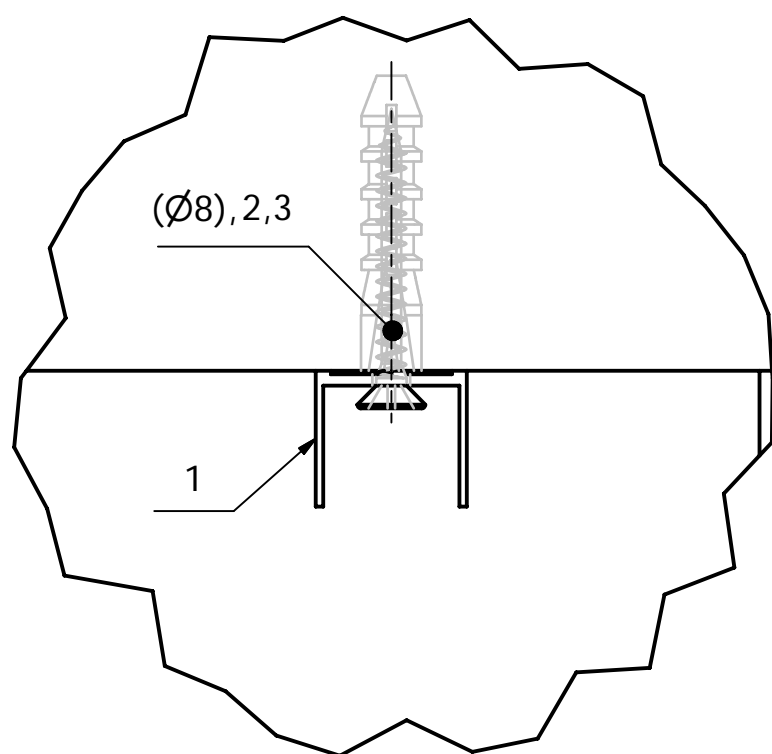

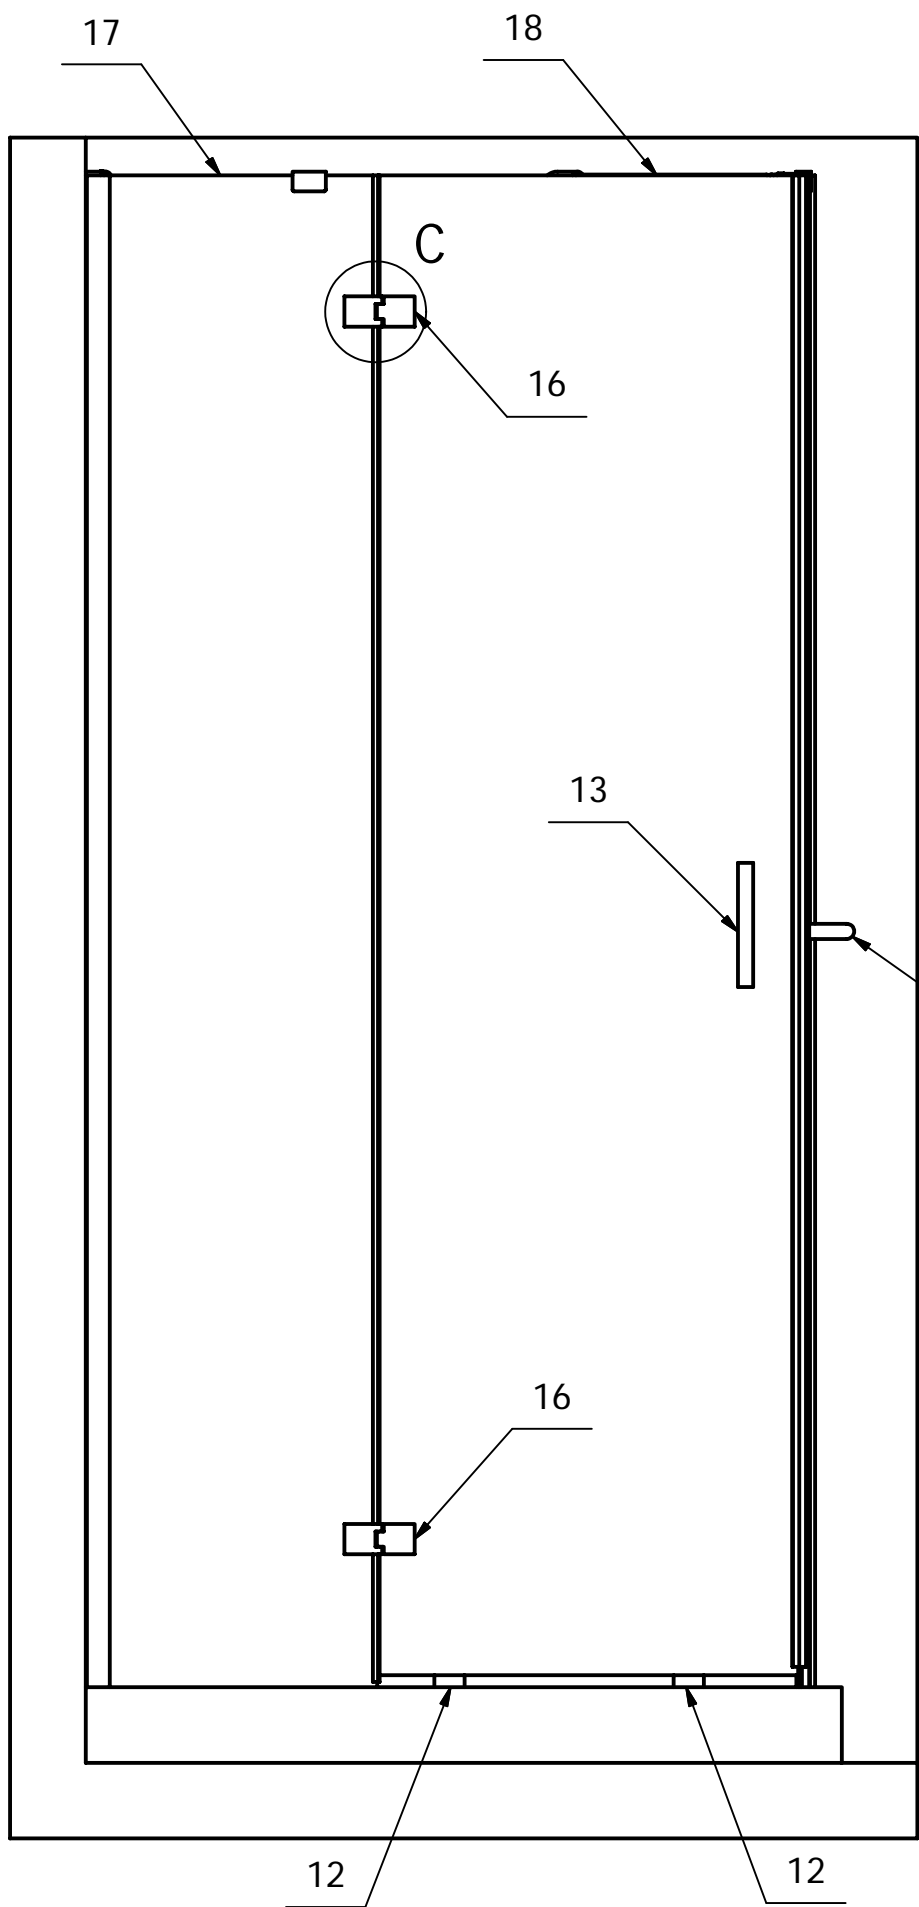


C (0,60 : 1)


D (0,60 : 1)

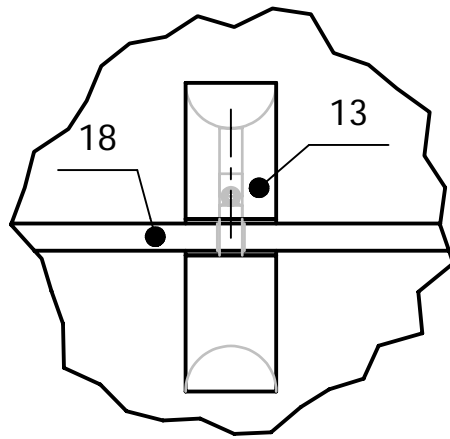


E (0,60 : 1)

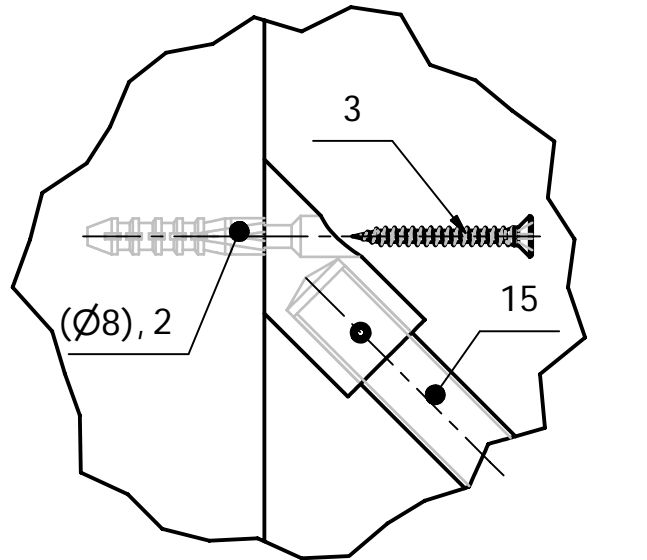



F (0,60 : 1)

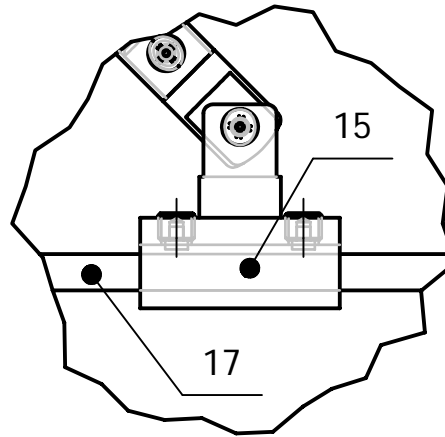


G (1 : 1)

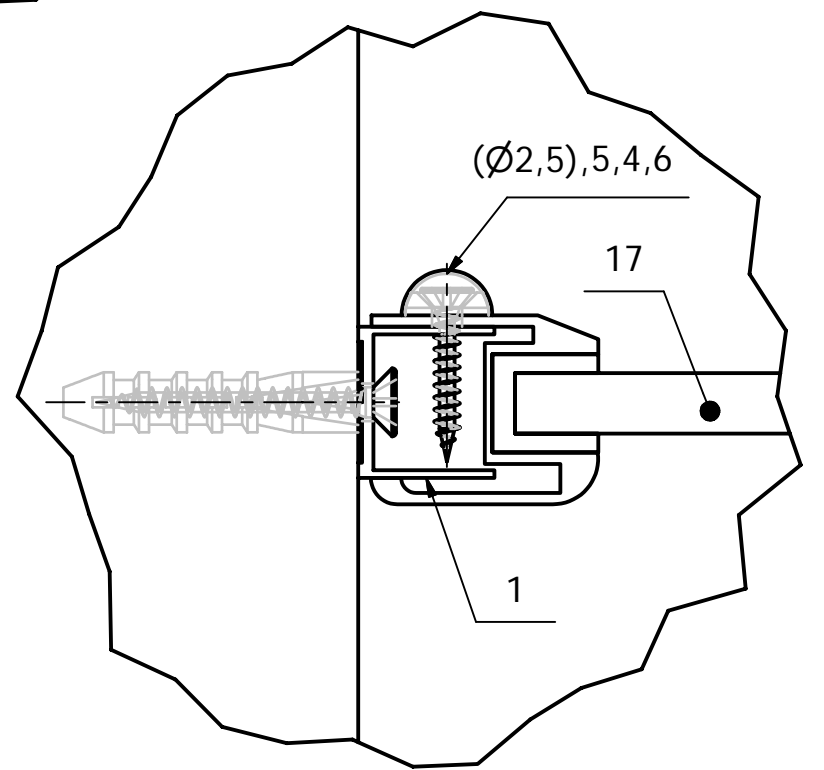


H (1 : 1)

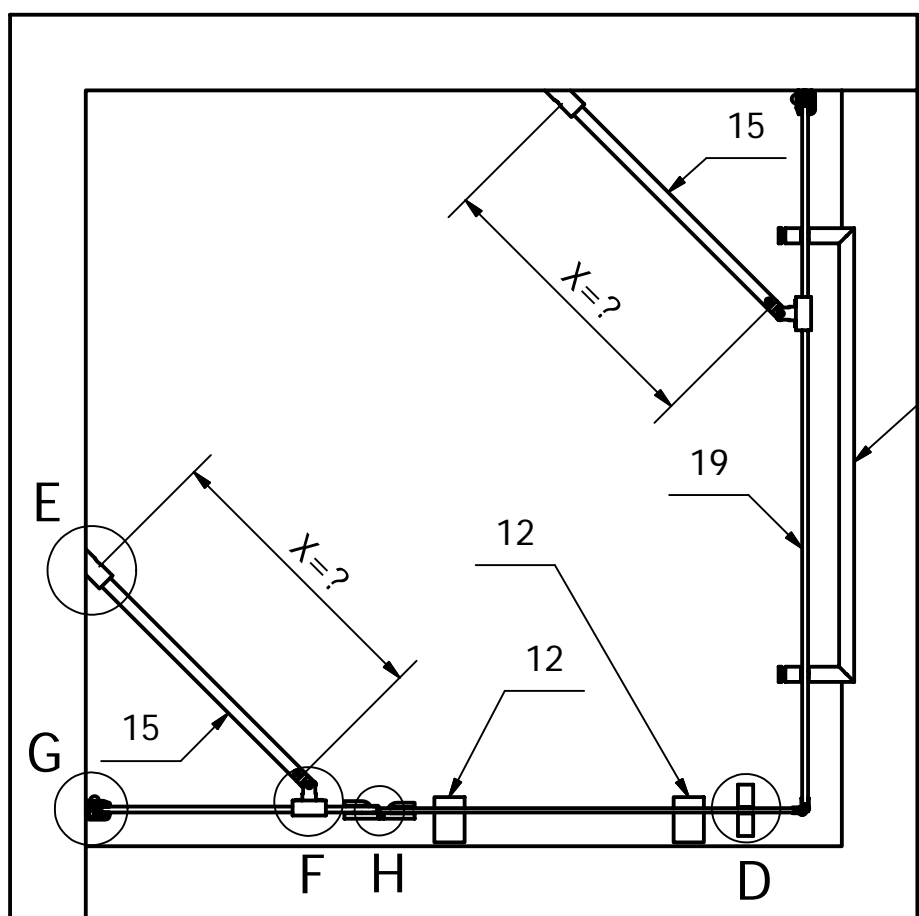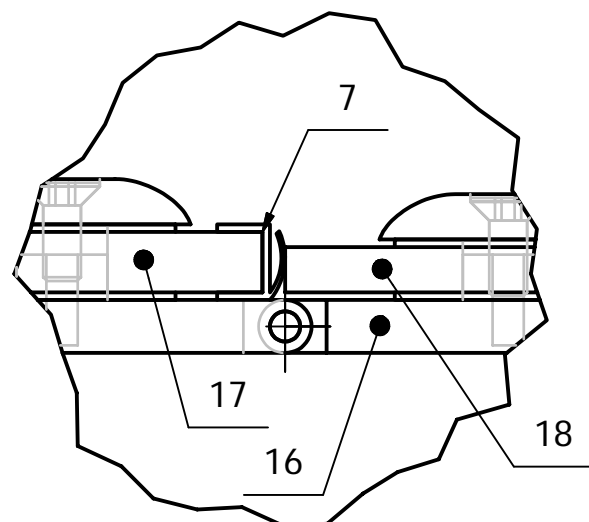


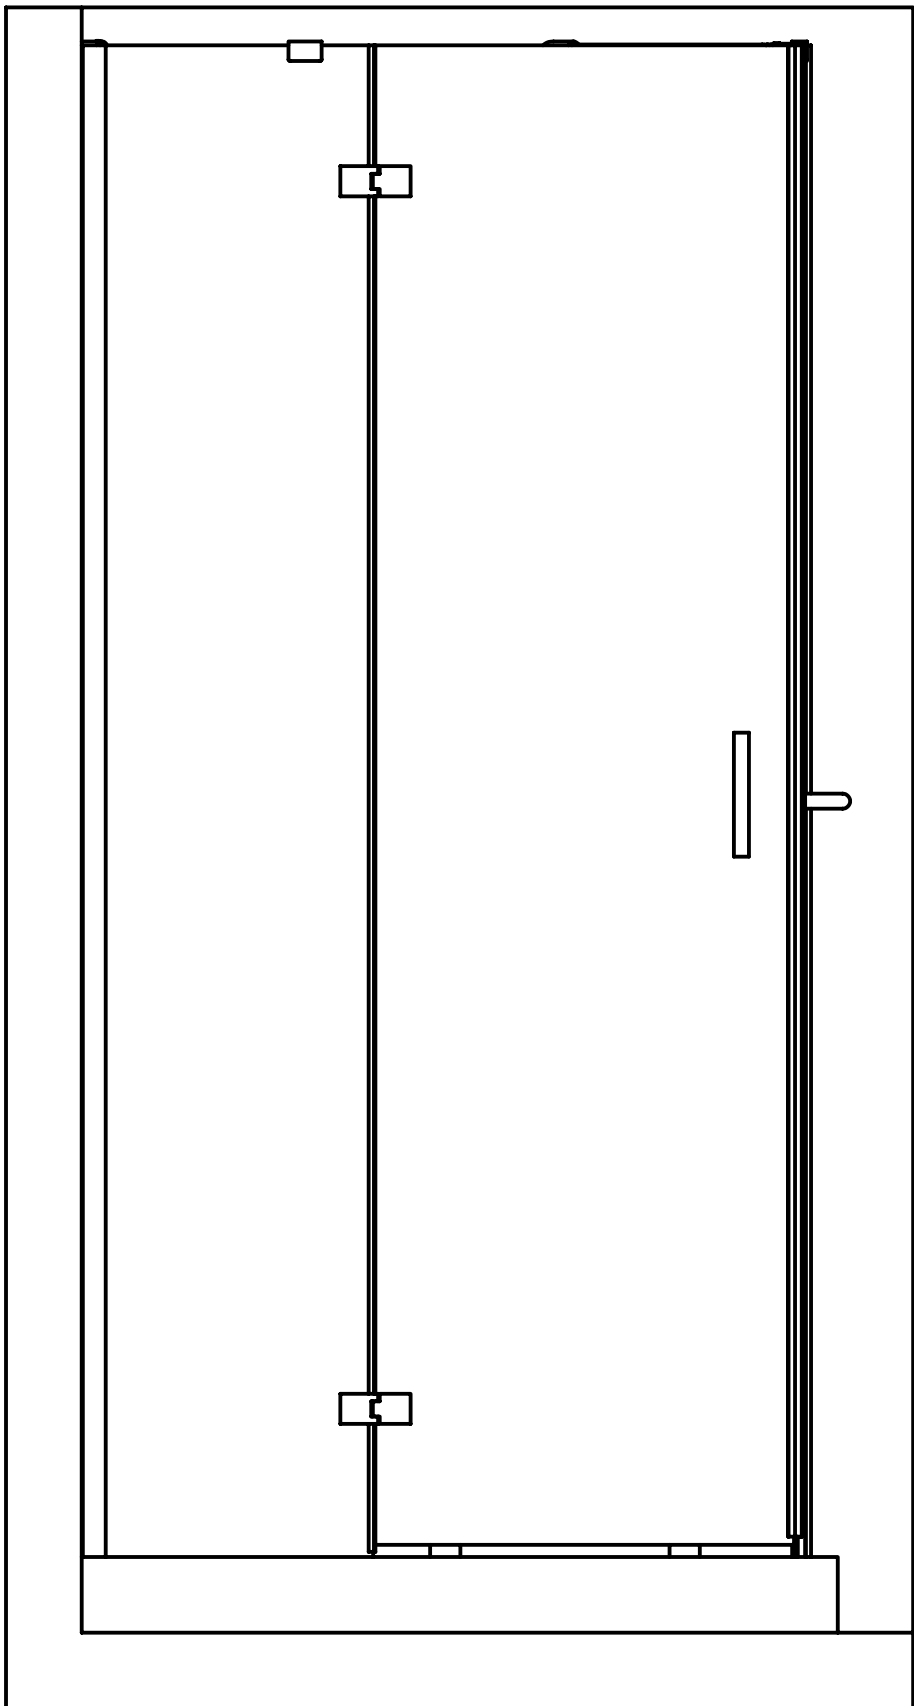



J (1:1)

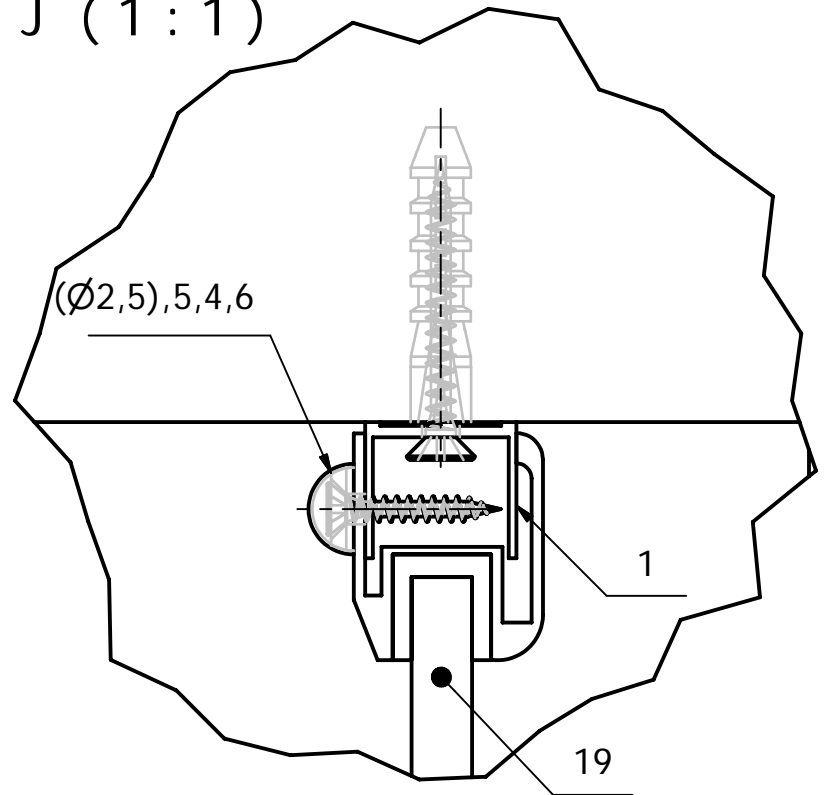


K (1:1)


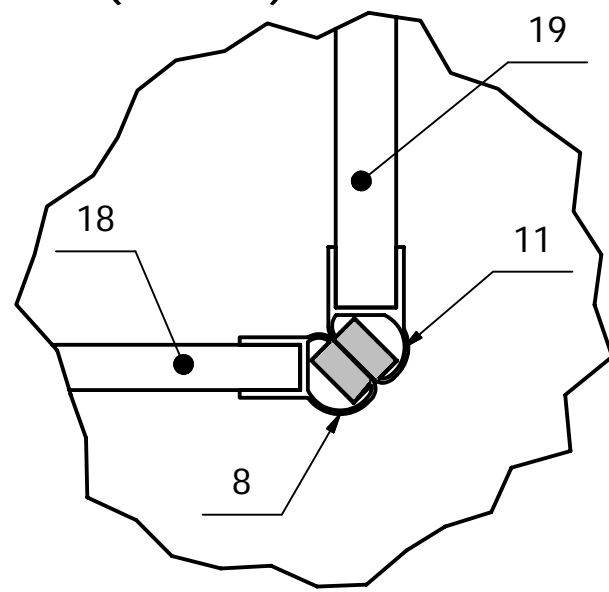


L (0,60:1)

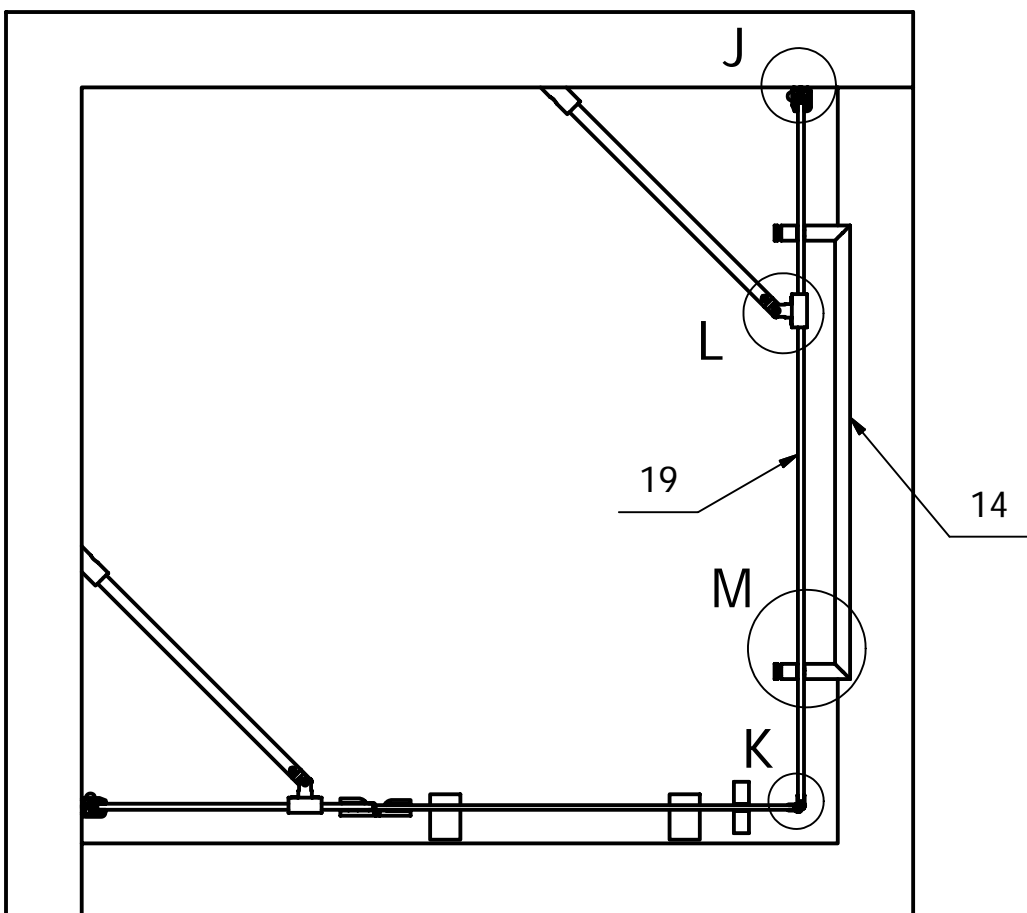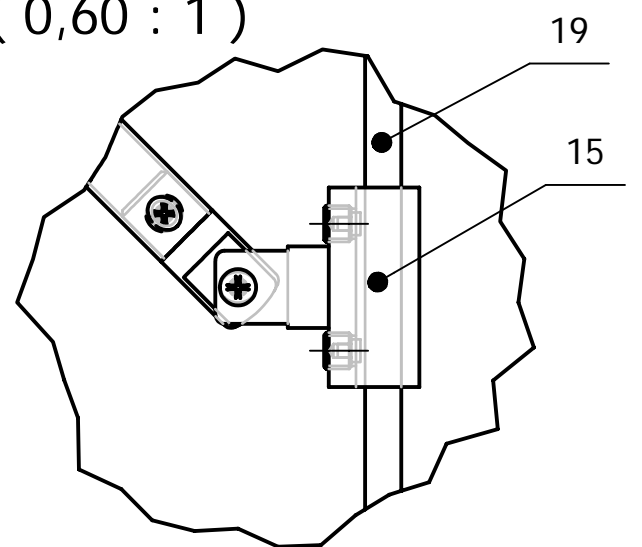


M (0,60:1)

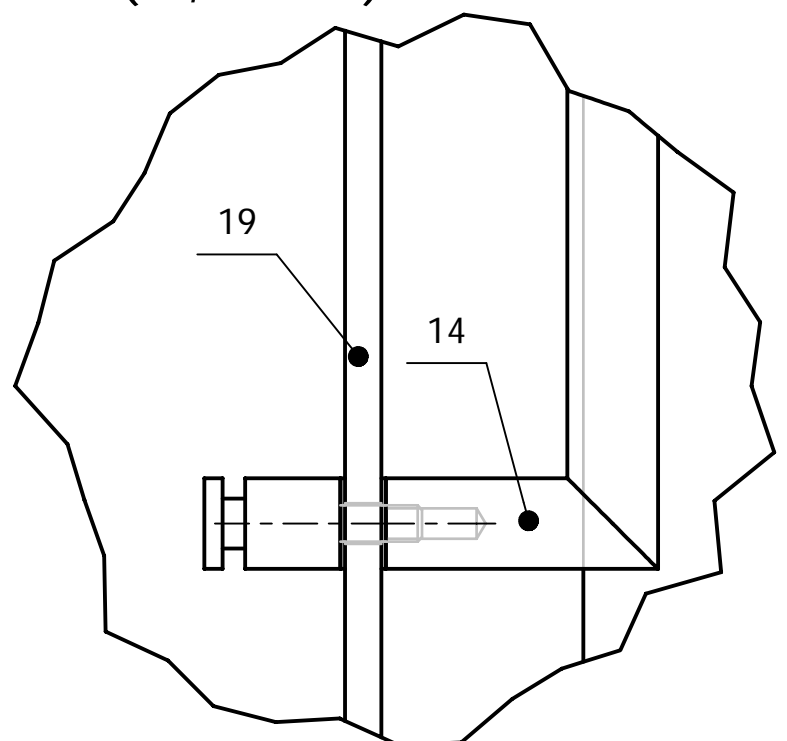


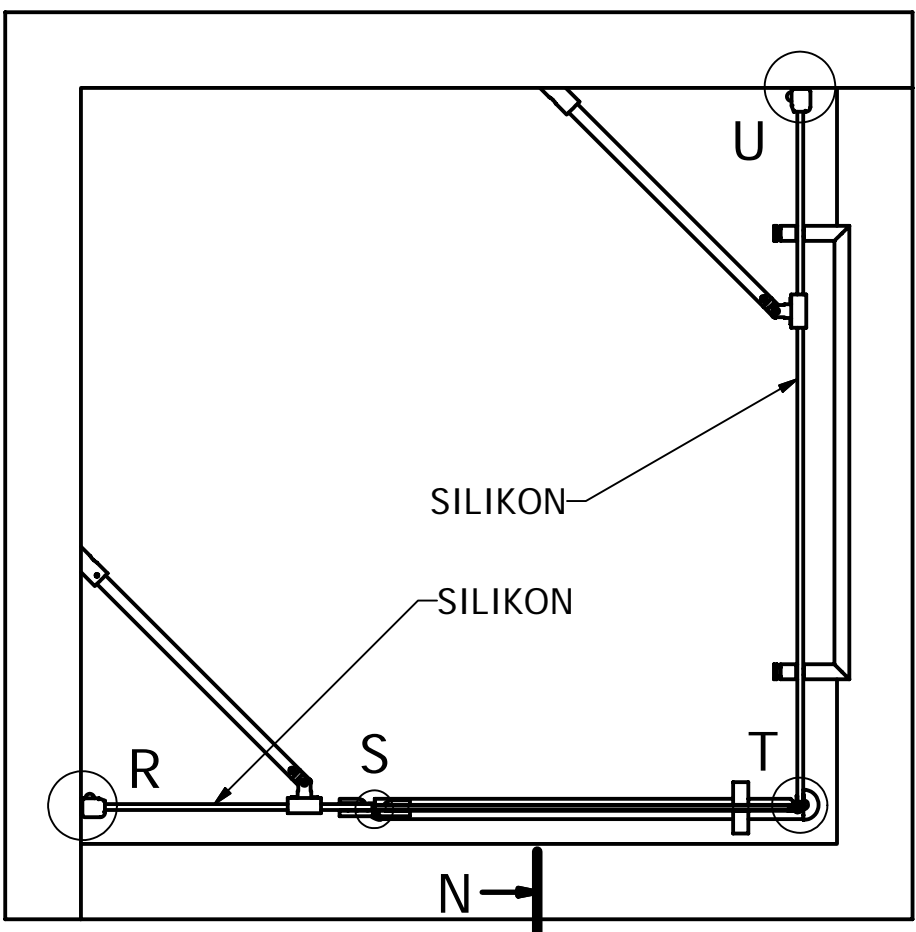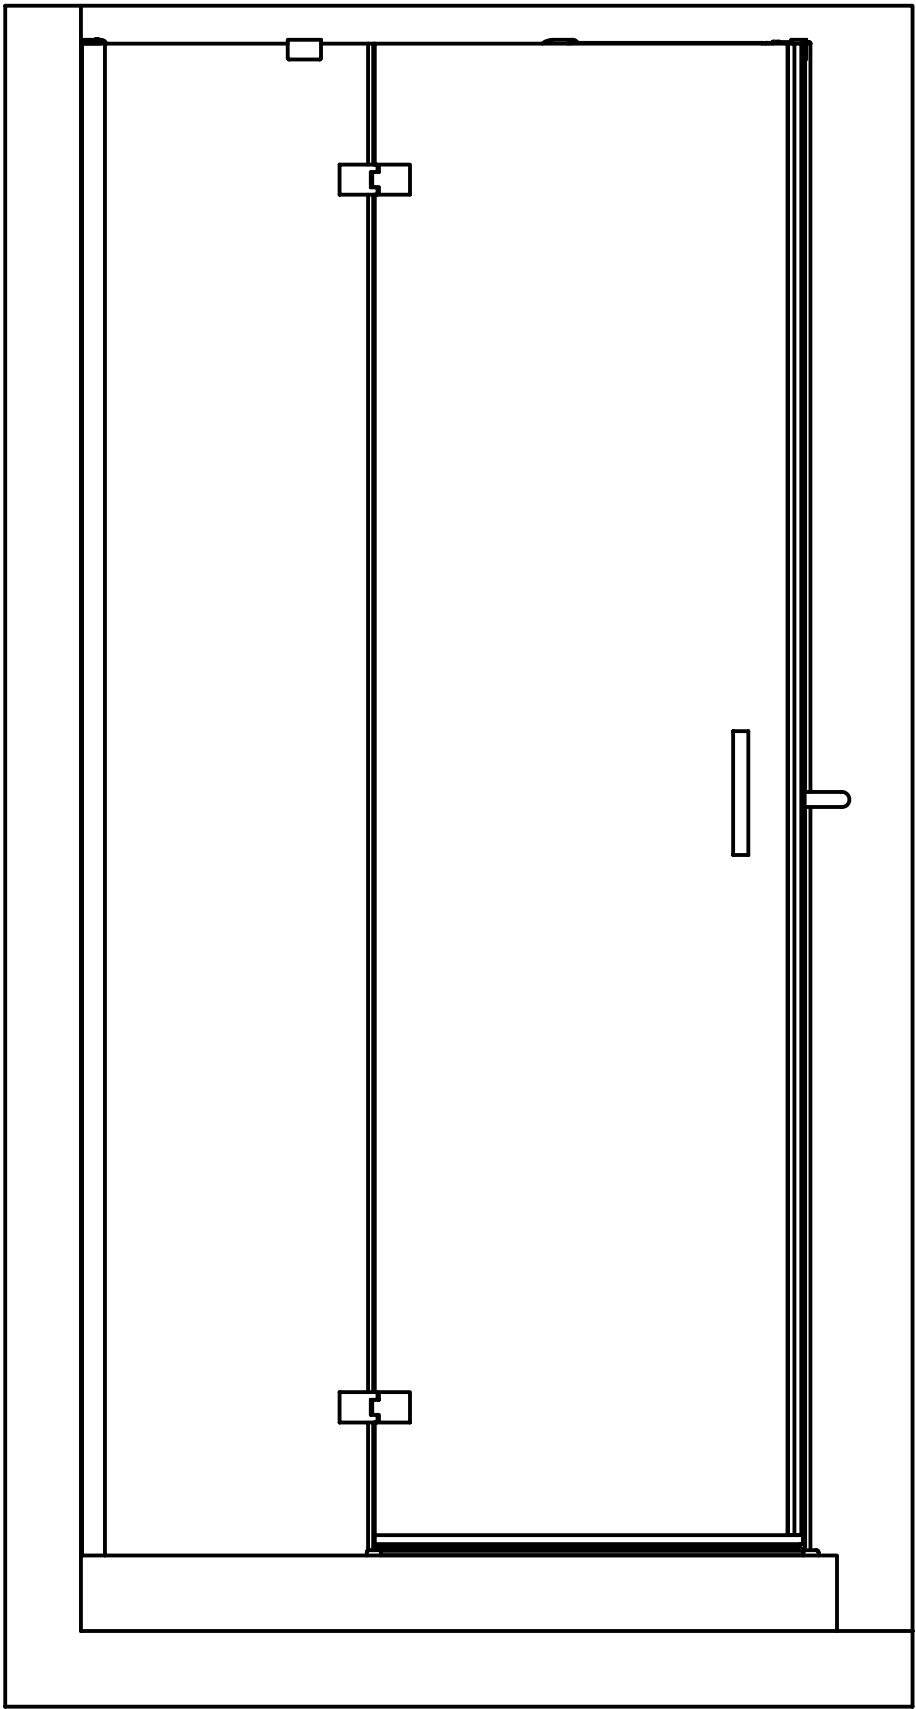


N (1:1)

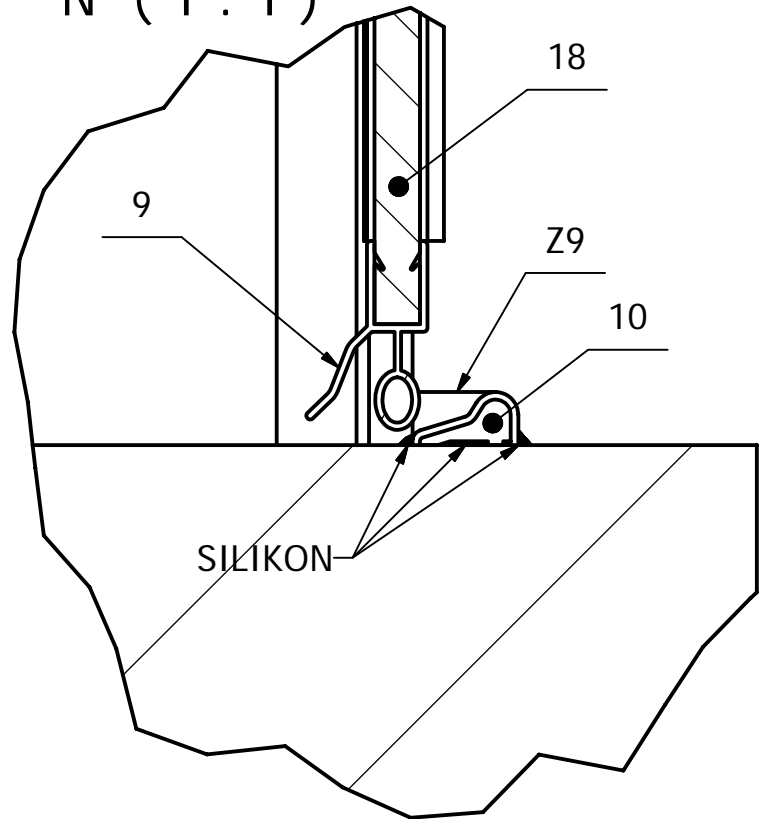


R (1:1)

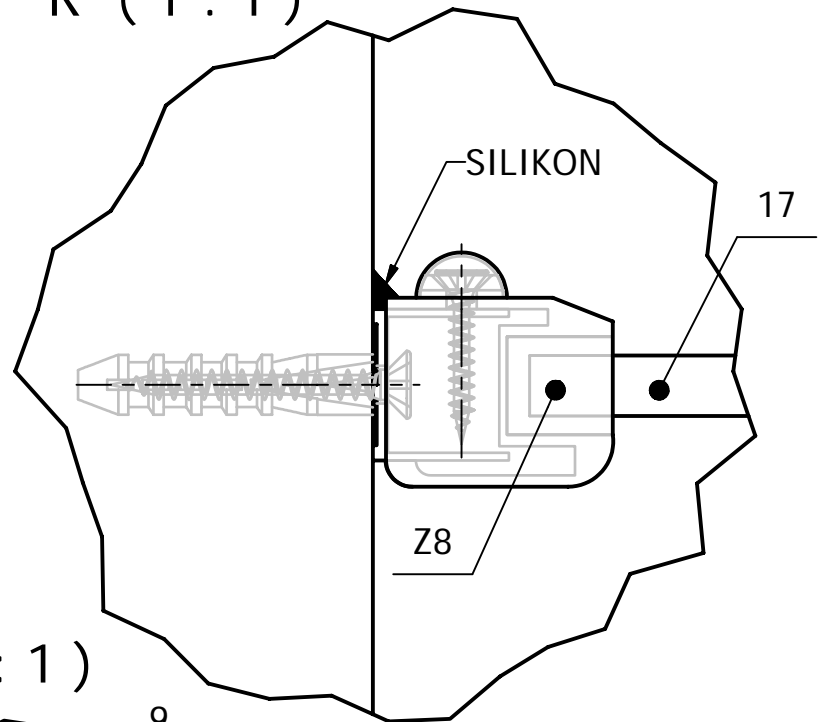

S (1:1)

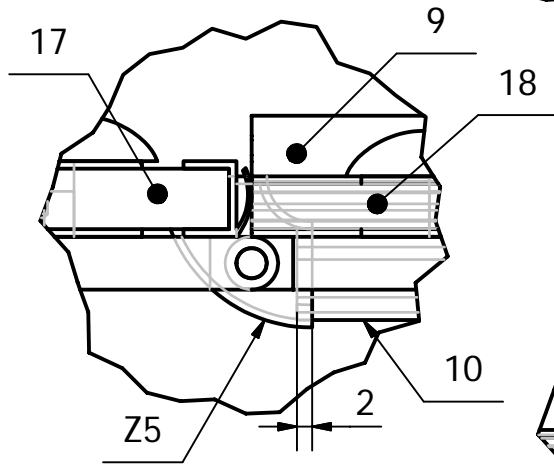

T (1:1)

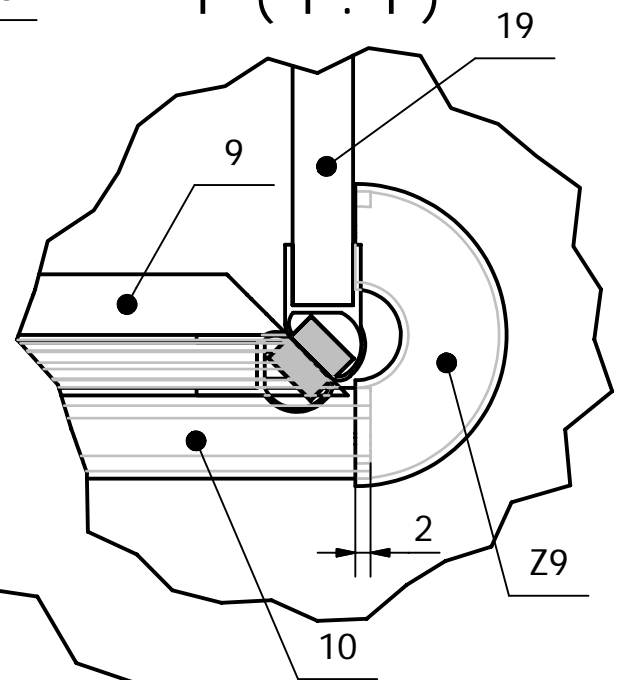

U (1:1)

