



Uživatelský návod pro

bezrámové pantové zástěny

Vitra Line

BN 1215 R

BN 1315 R


BN 1415 R












Polysan s.r.o
Nesměřice 52
285 22 Zruč nad Sázavou


www.polysan.cz
www.polysan.net

e-mail: info@polysan.net

tel.: +420 327 585 983
fax.: +420 327 585 989

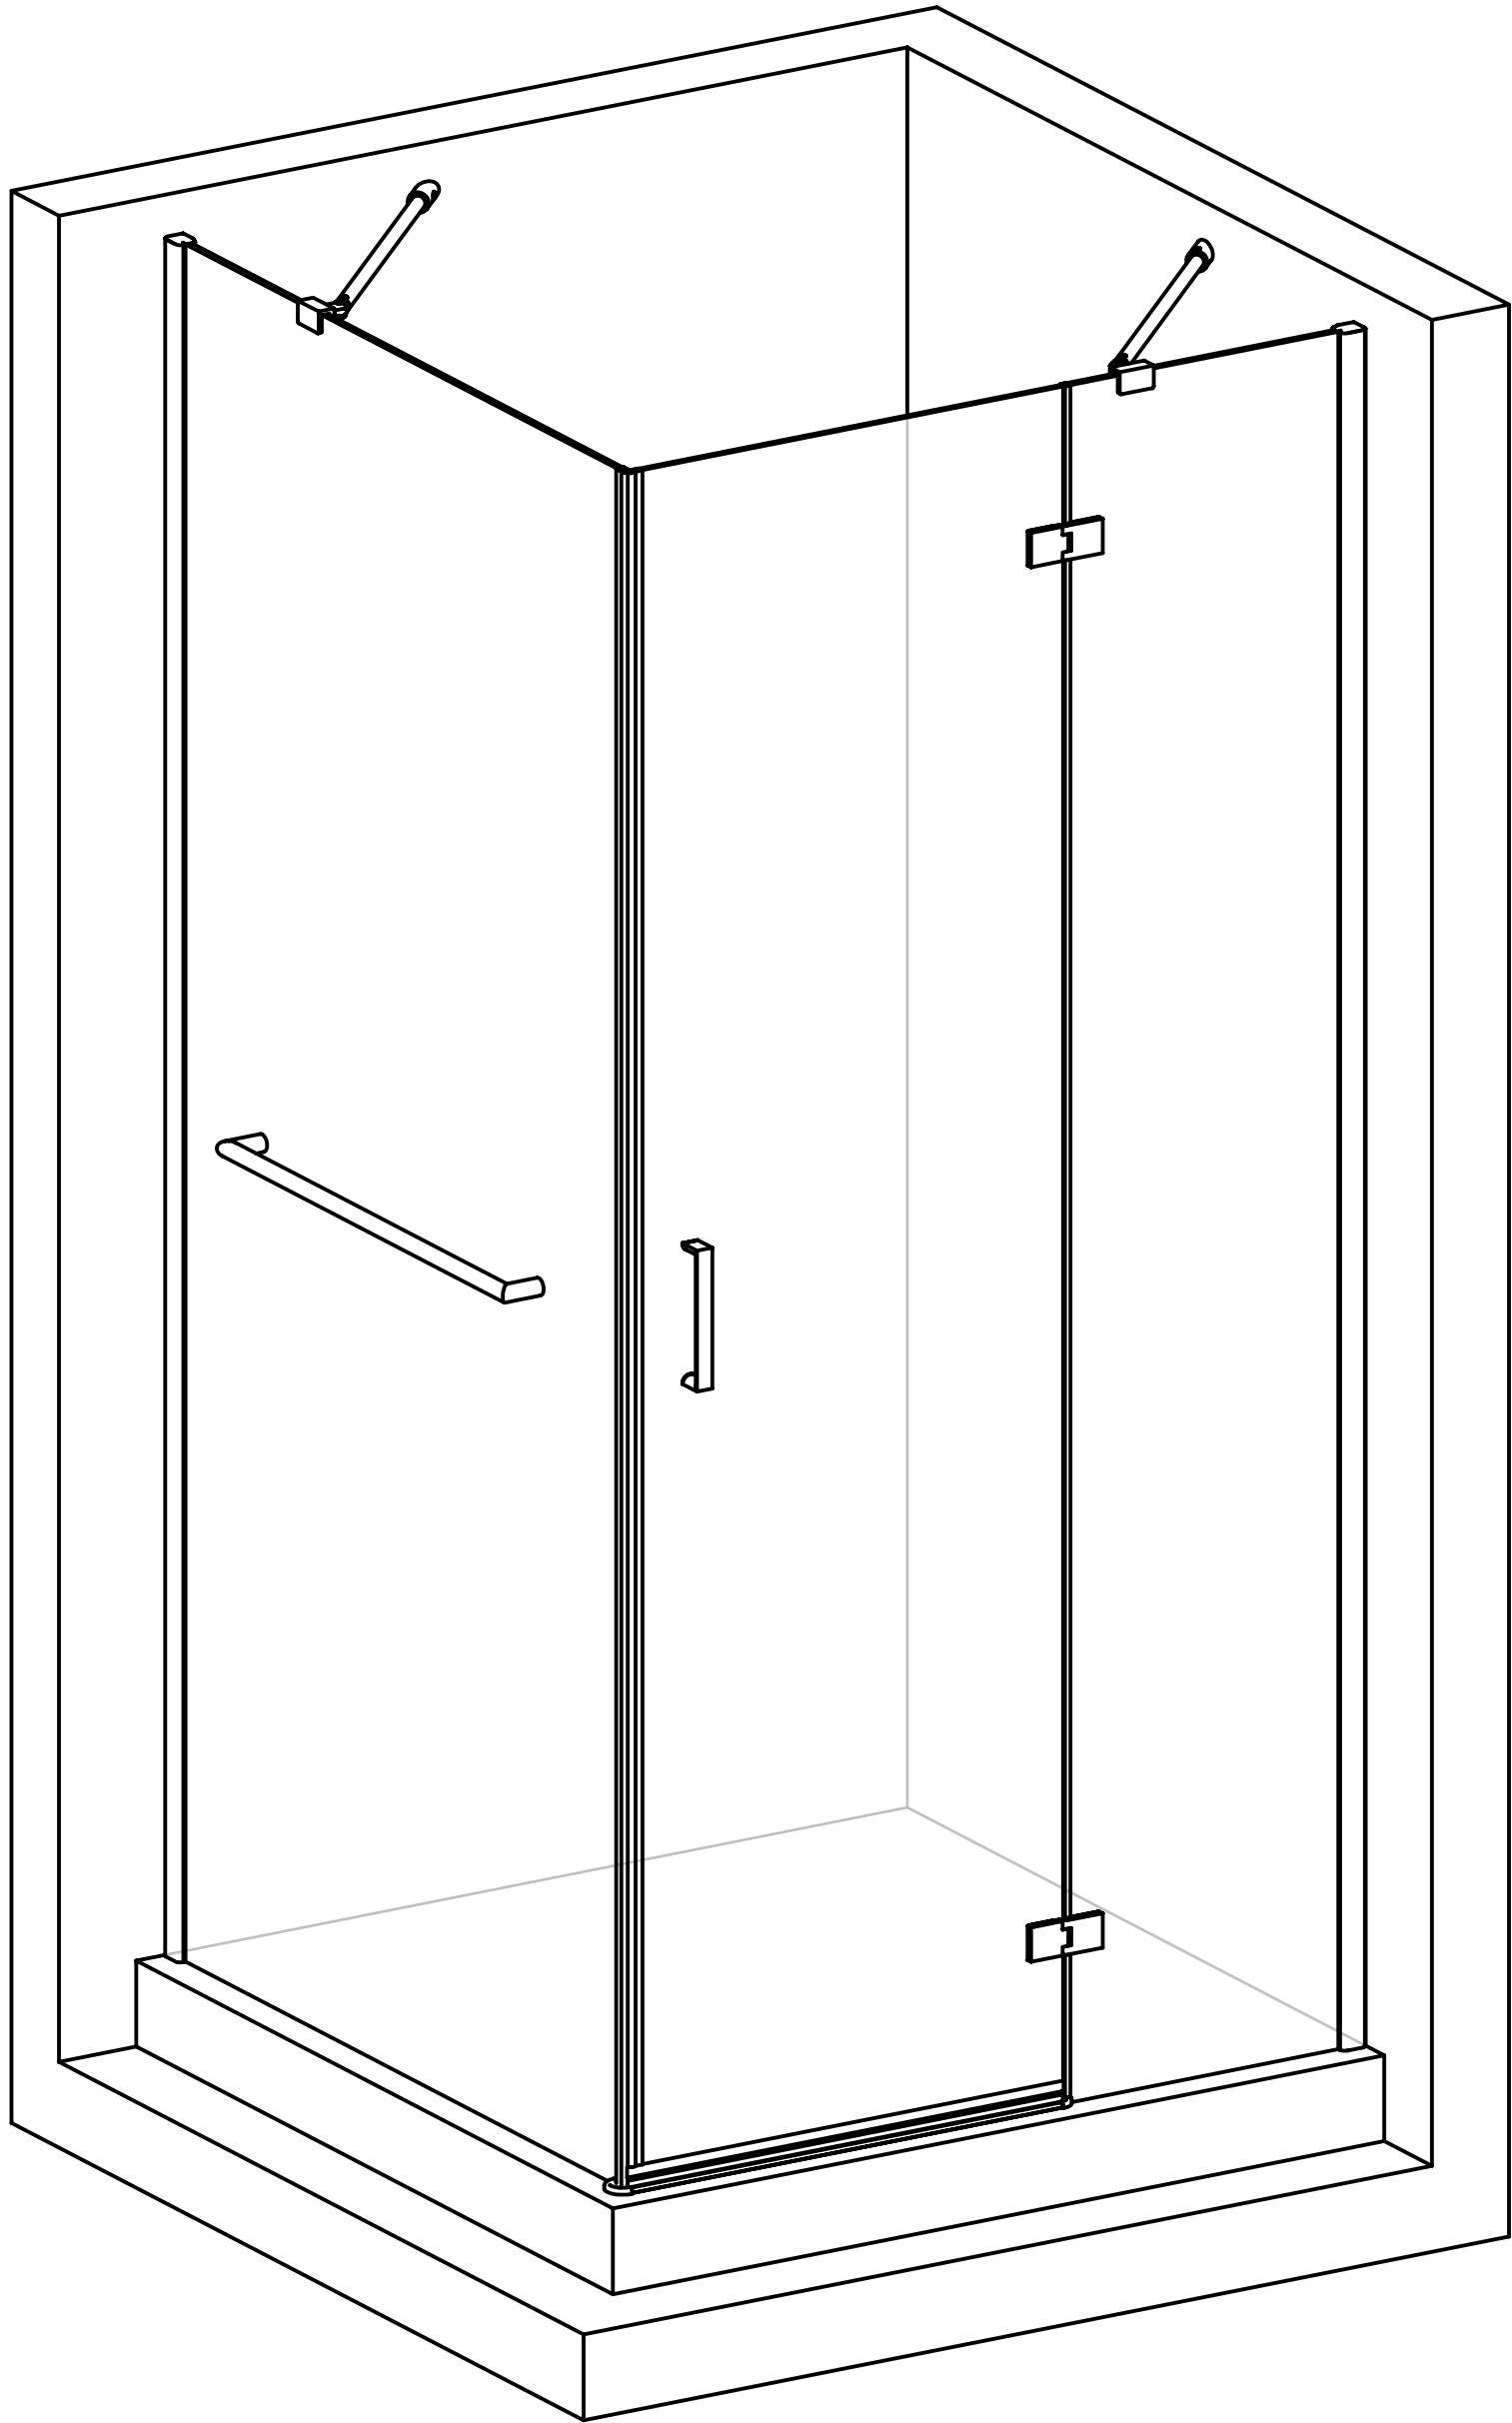


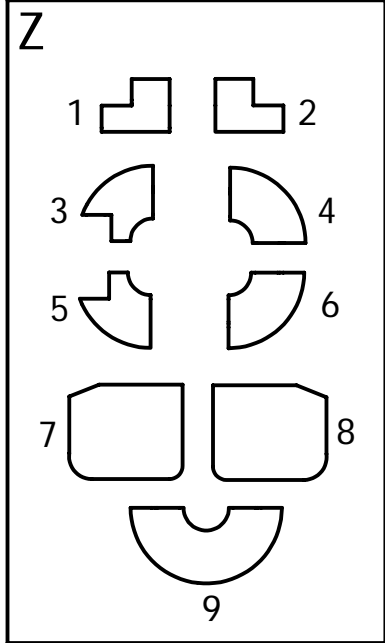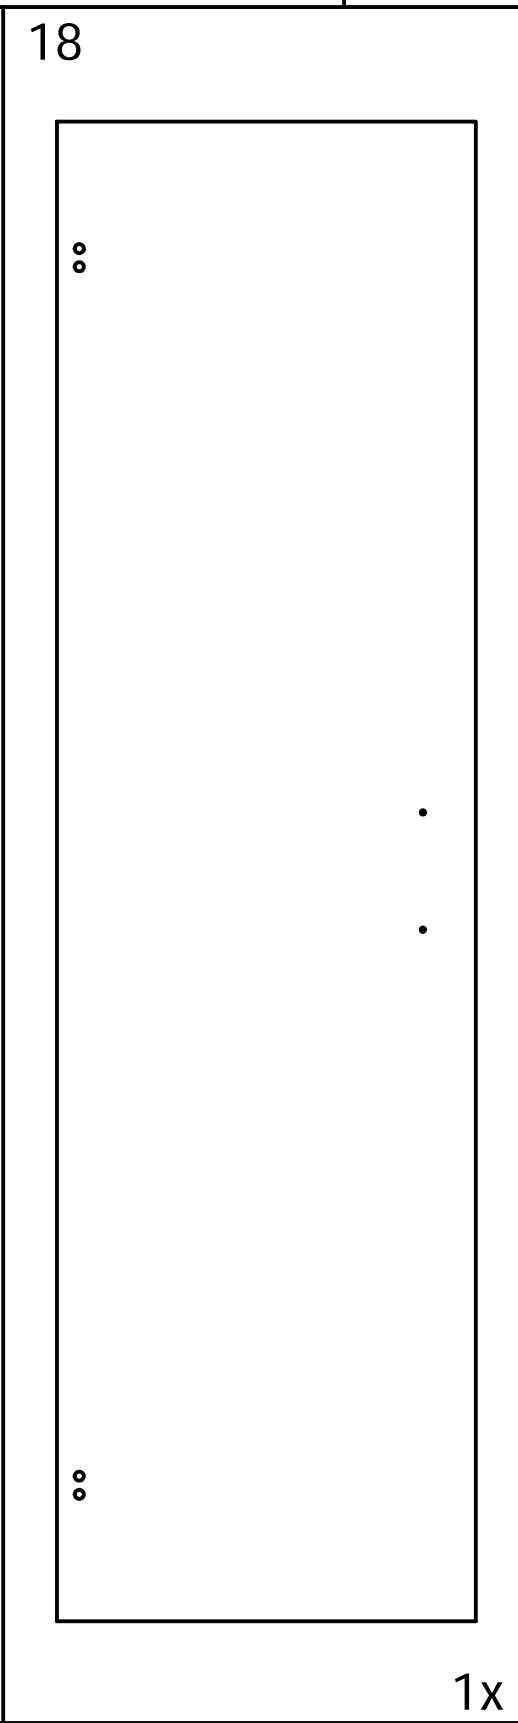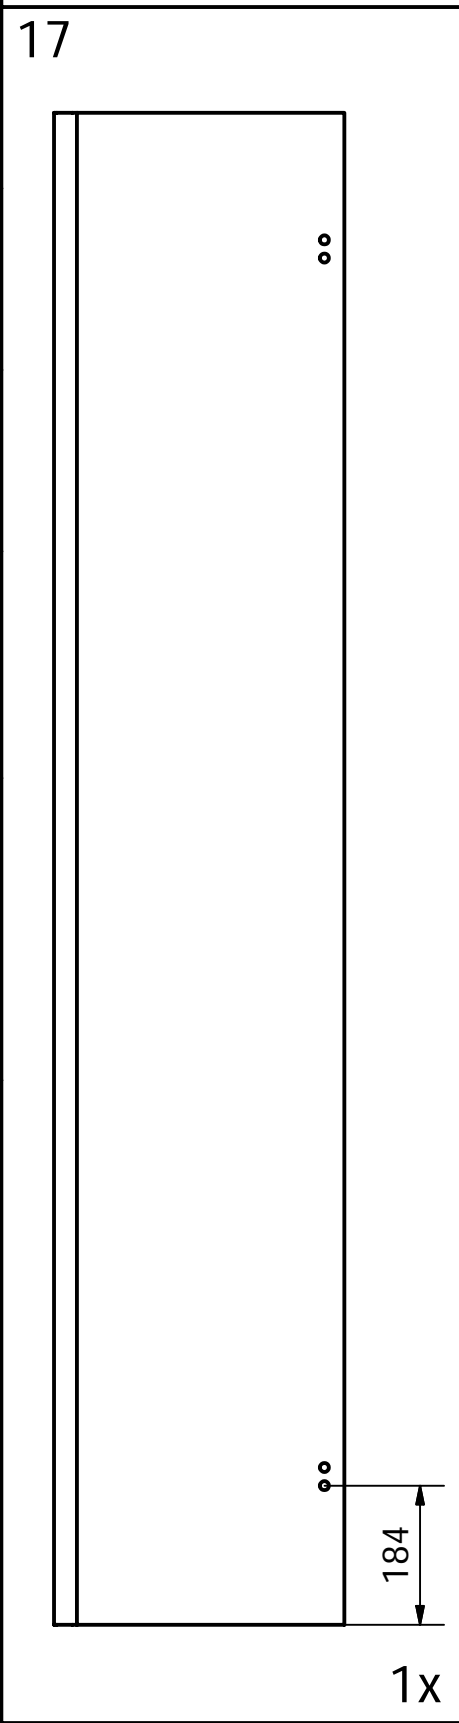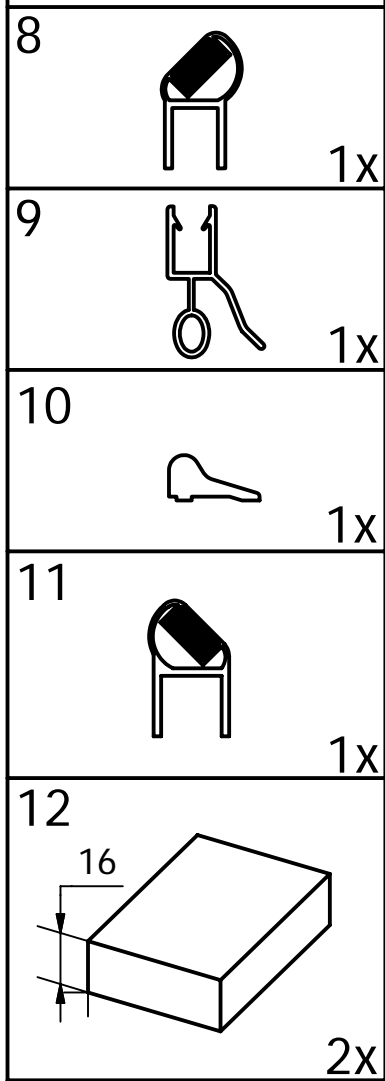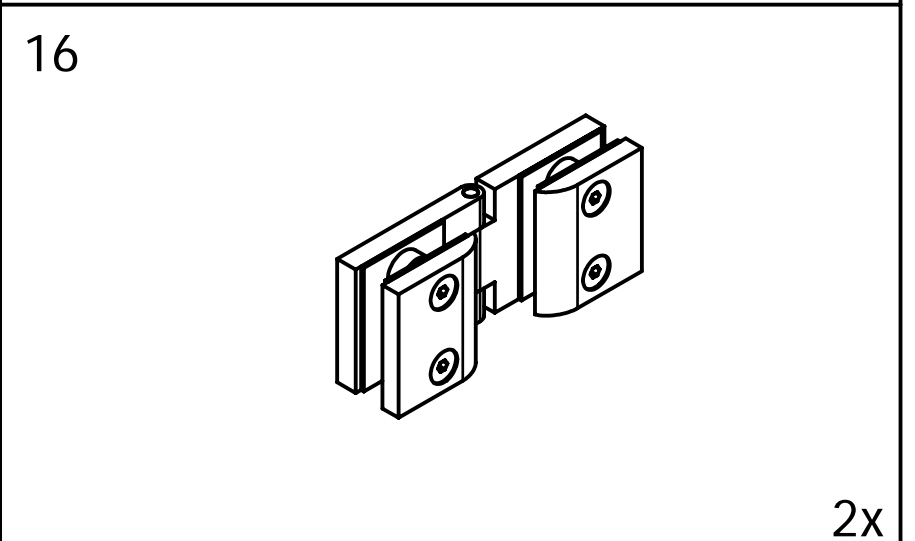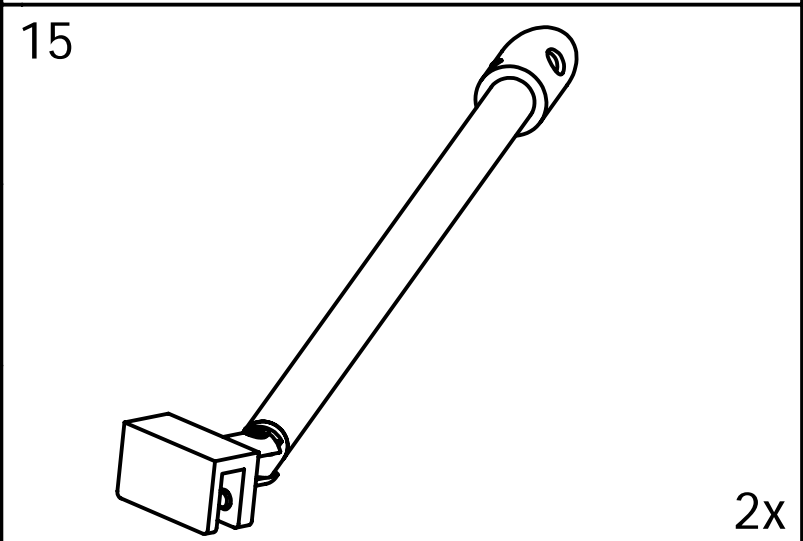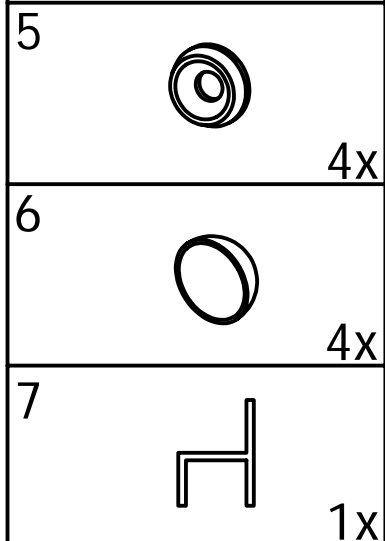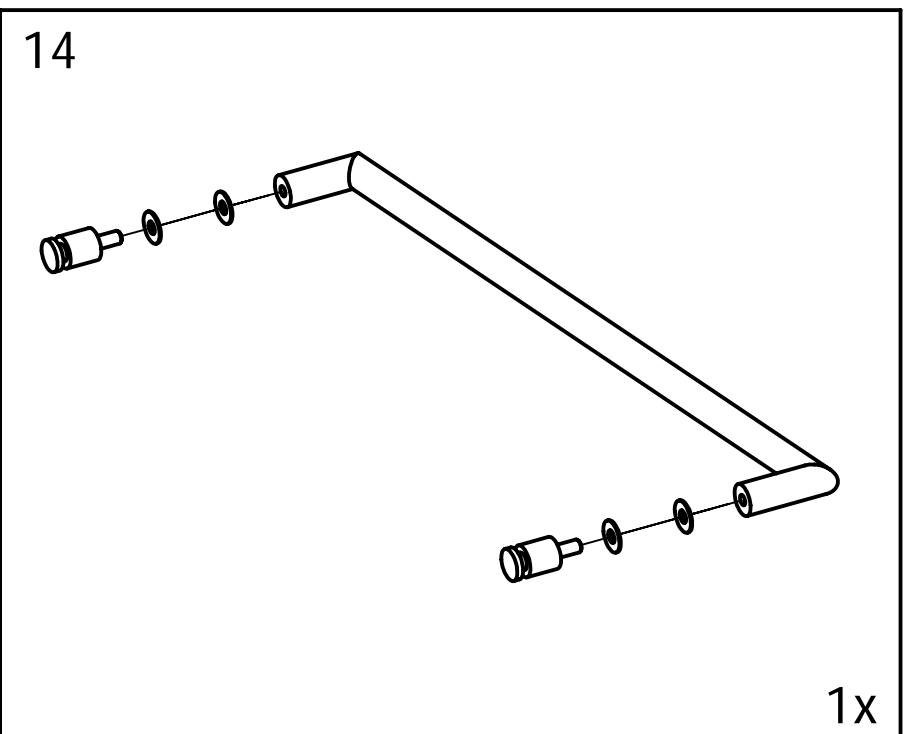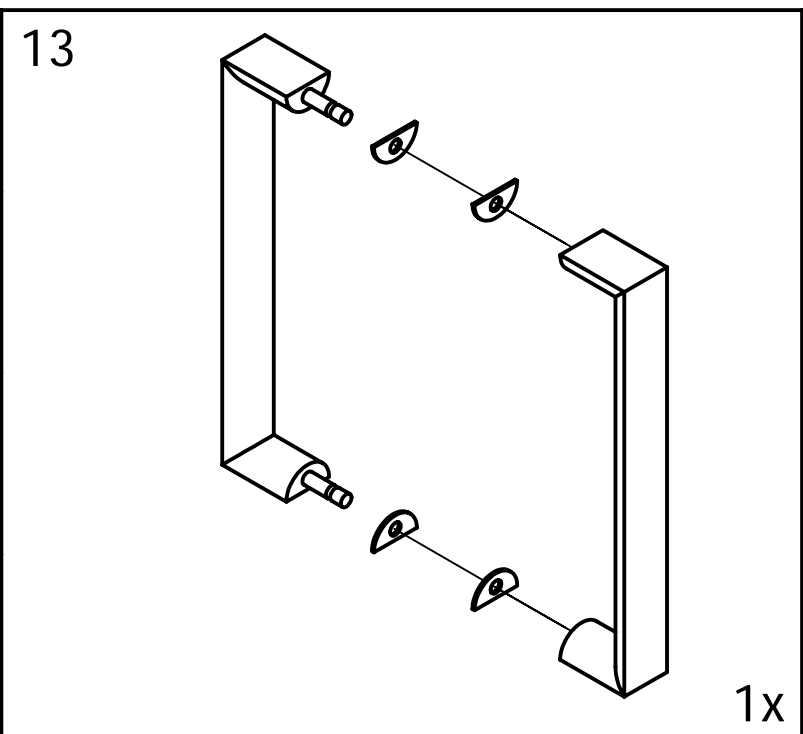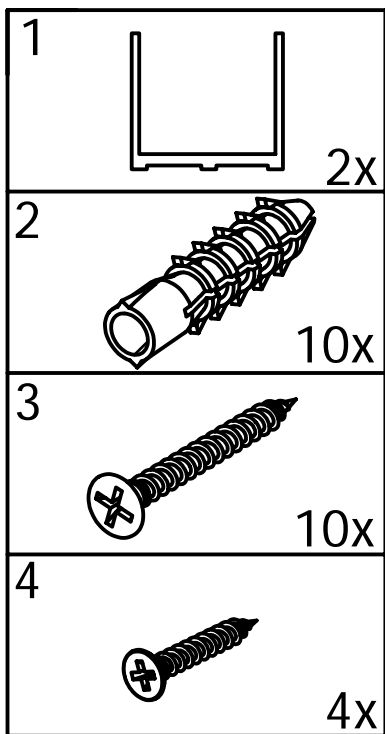


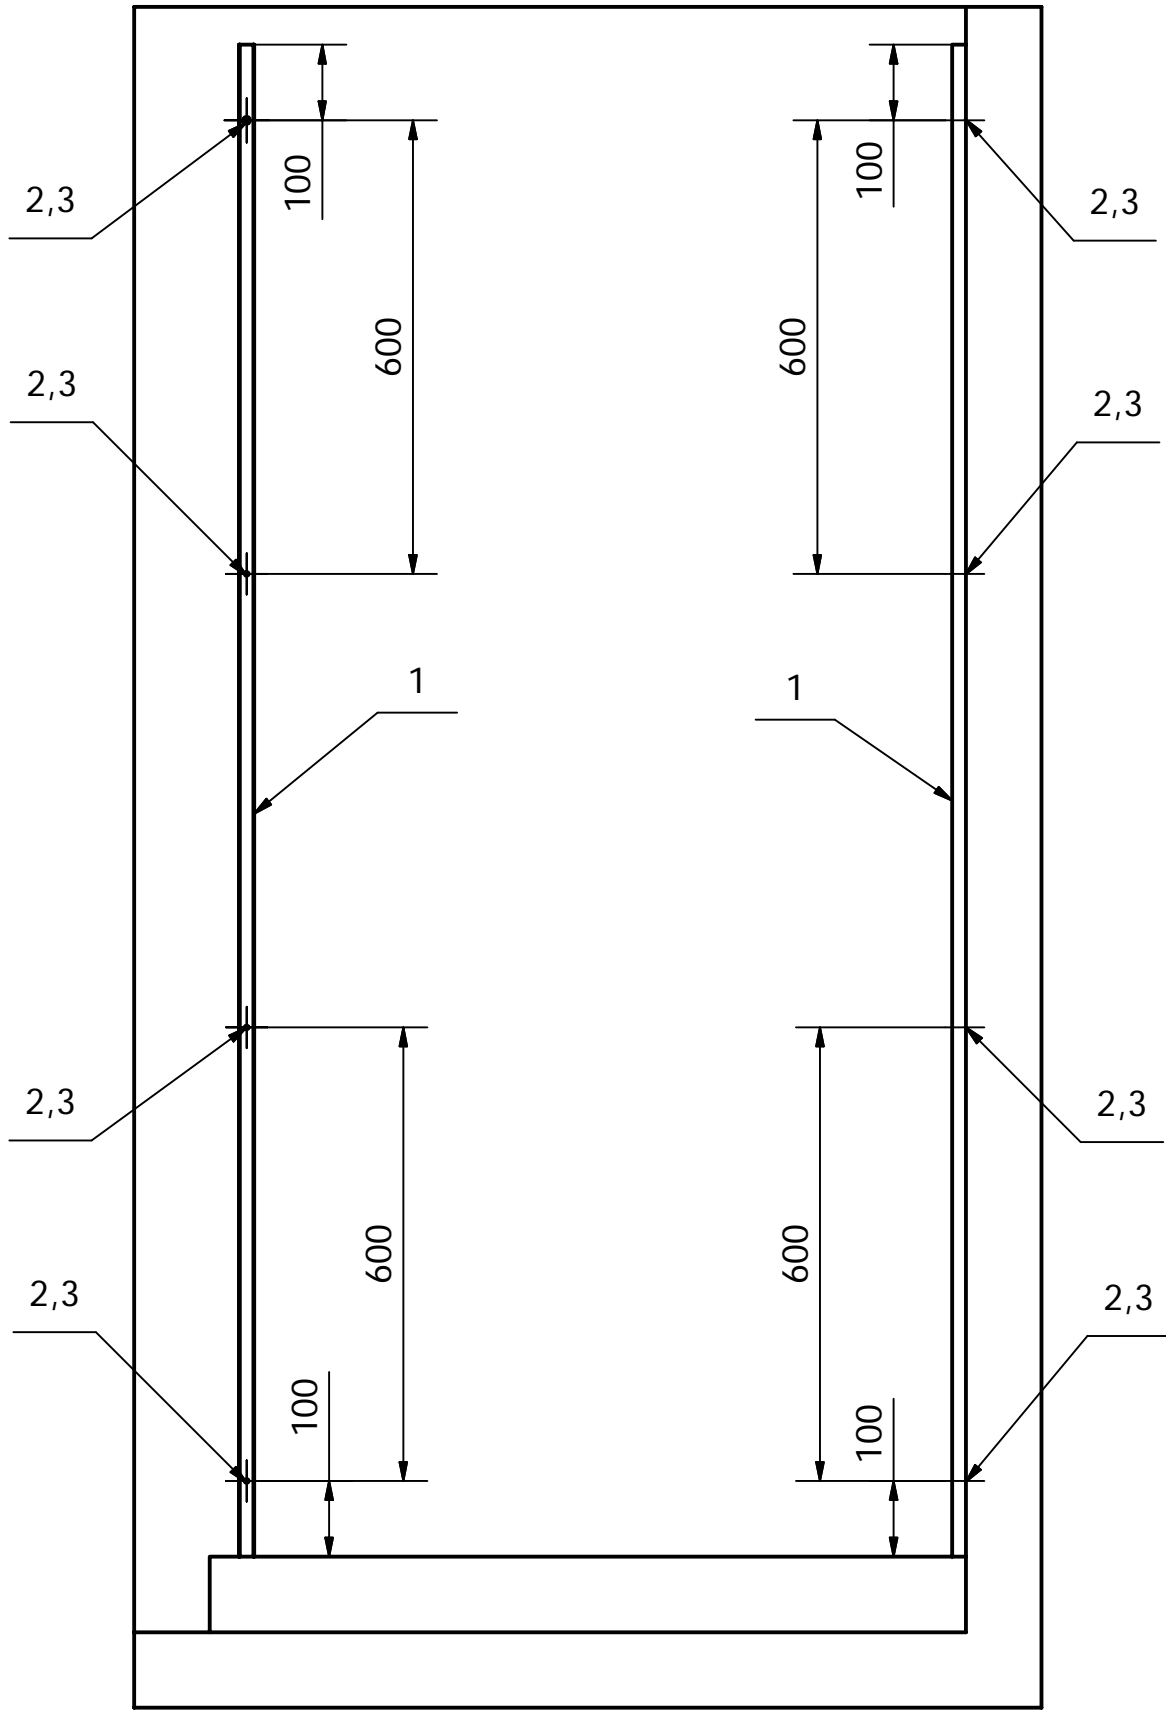








TYP	X	Y
BN1215R	750	750
BN1315R	850	850
BN1415R	950	950


A (1:1)

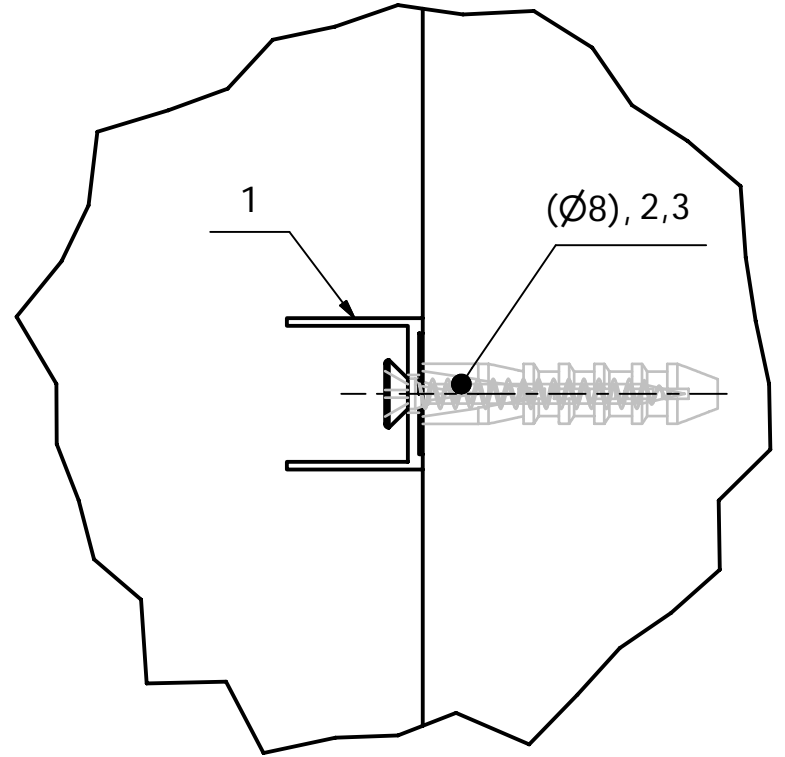


B (1:1)

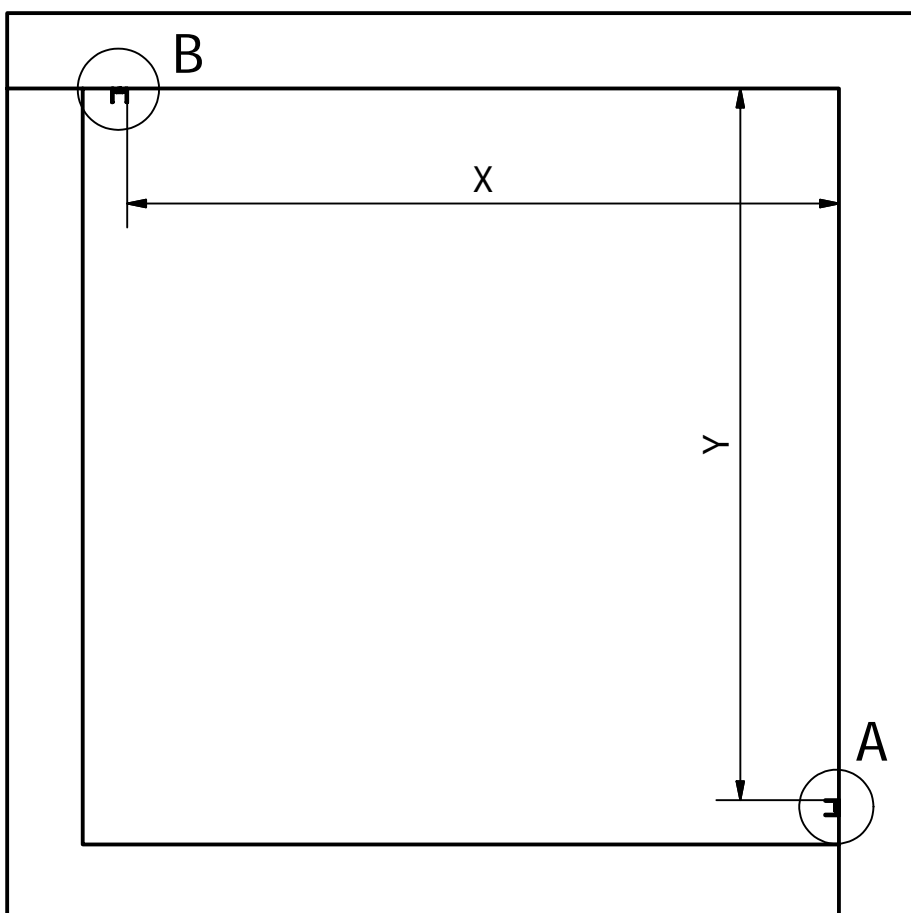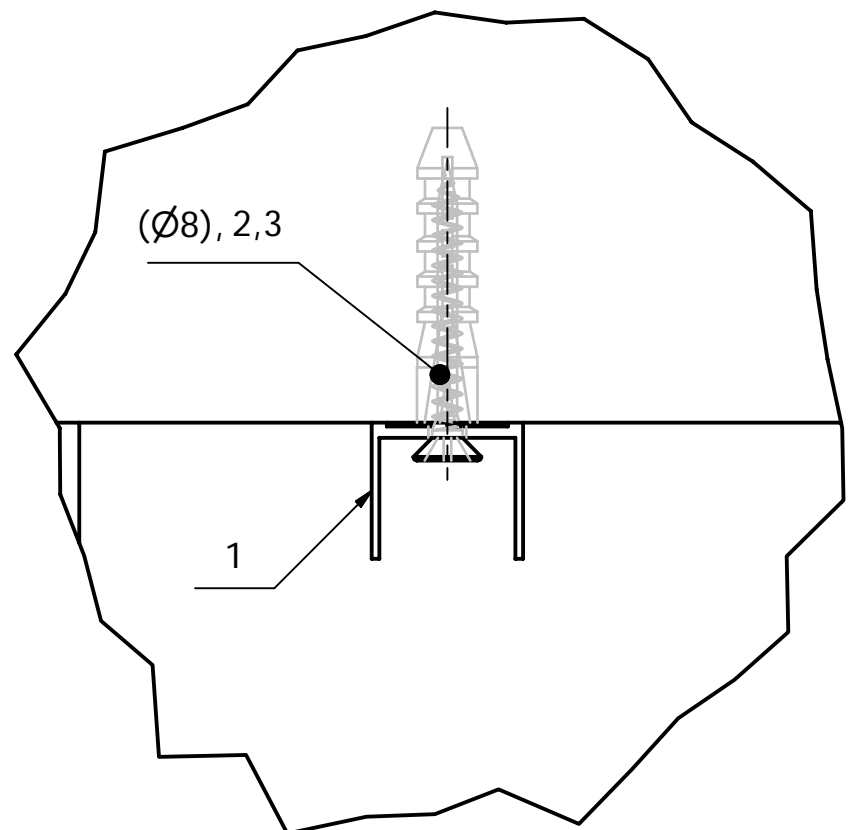

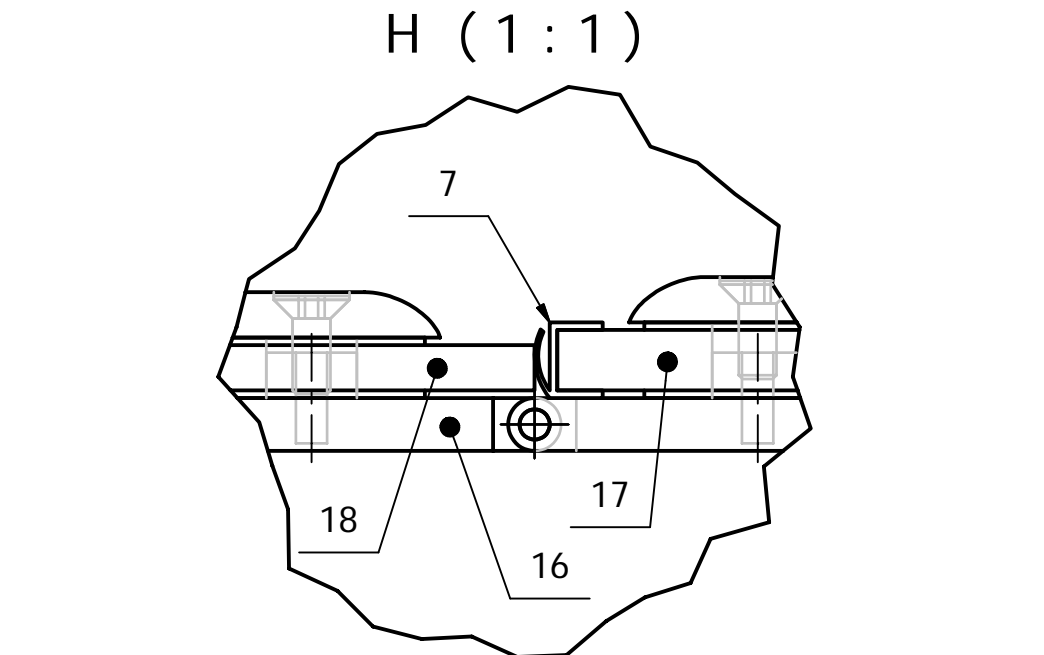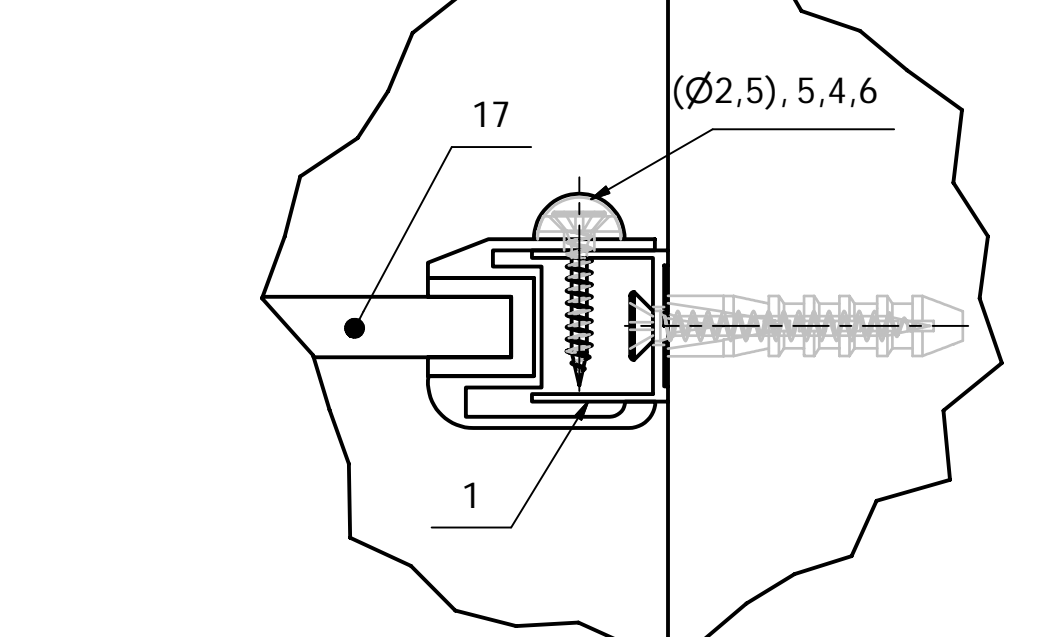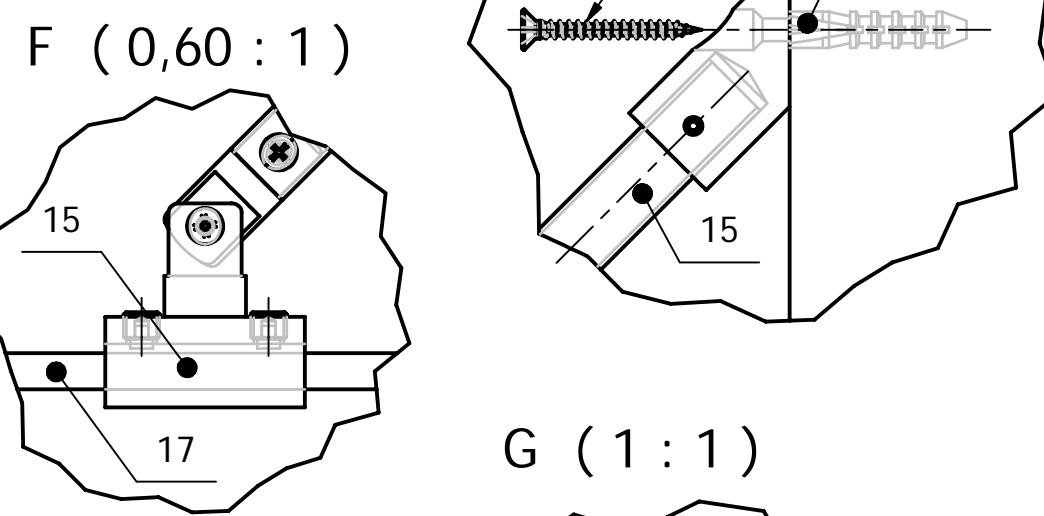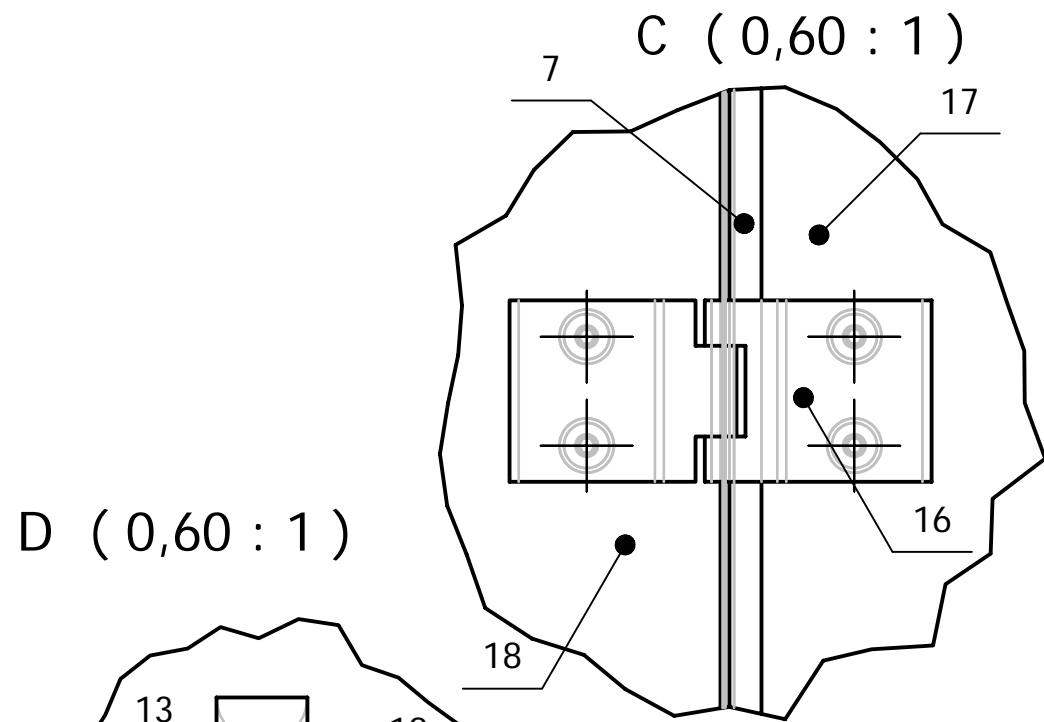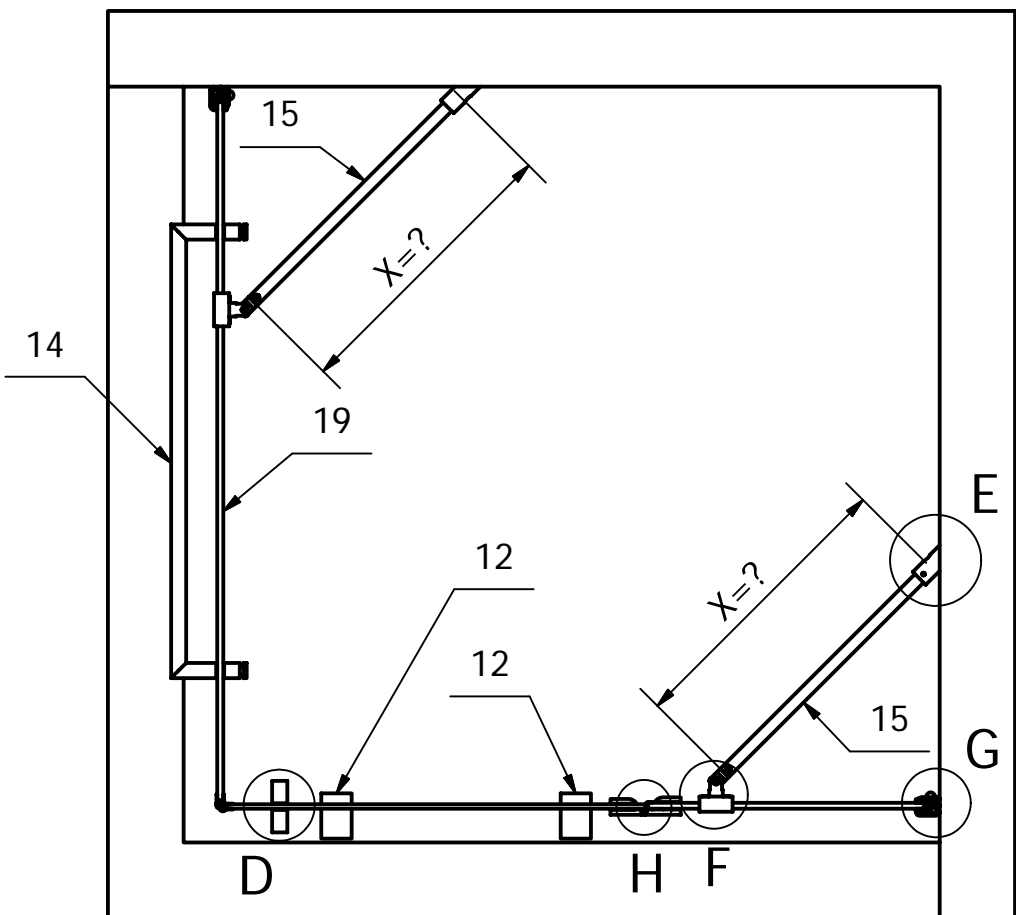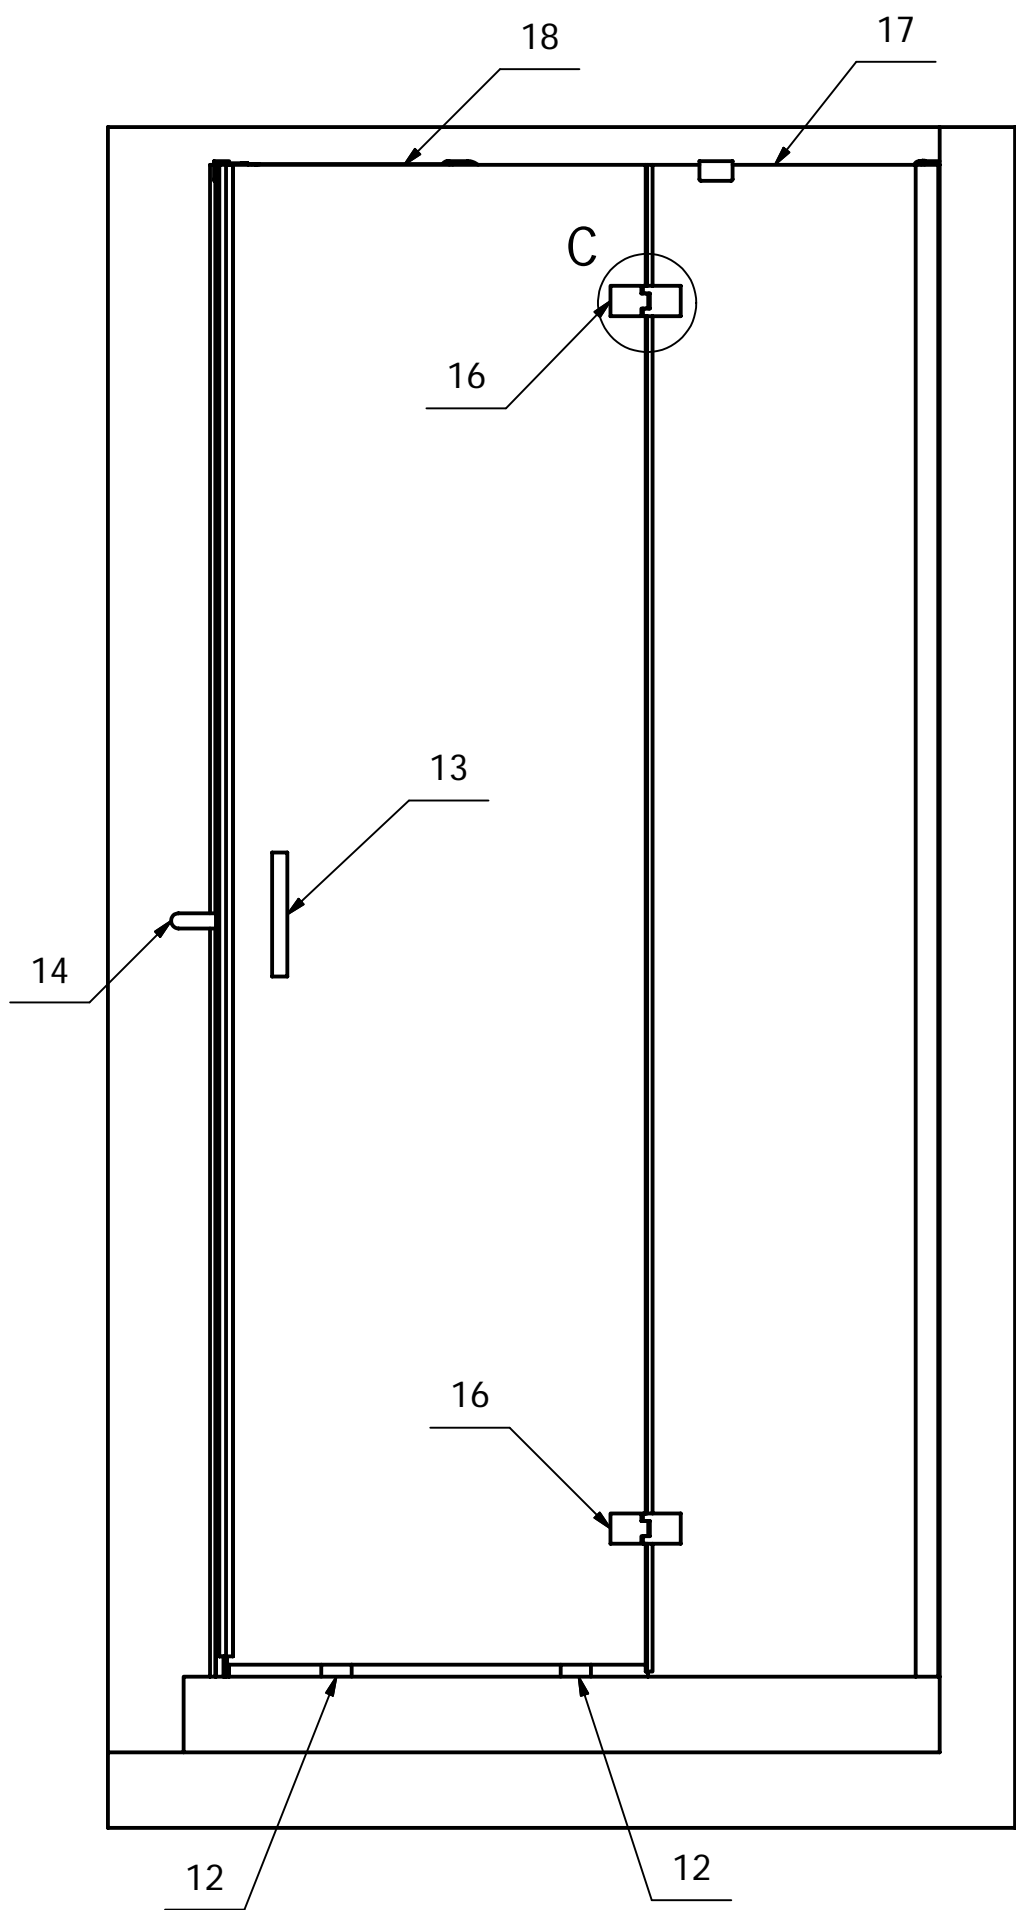


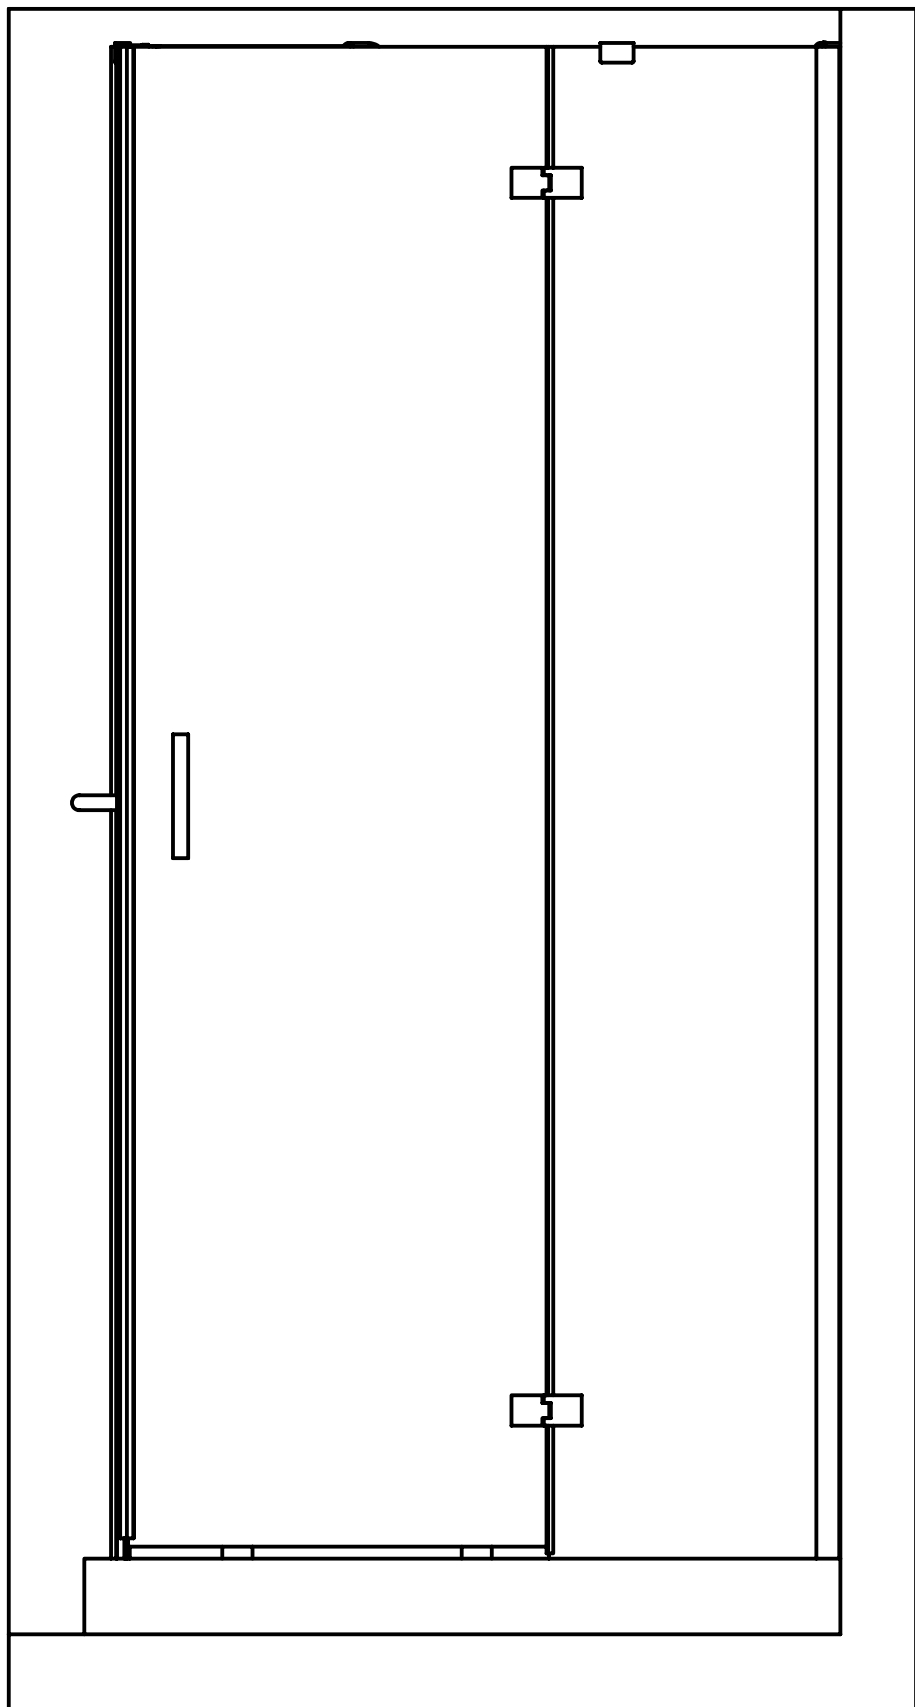


J (1:1)

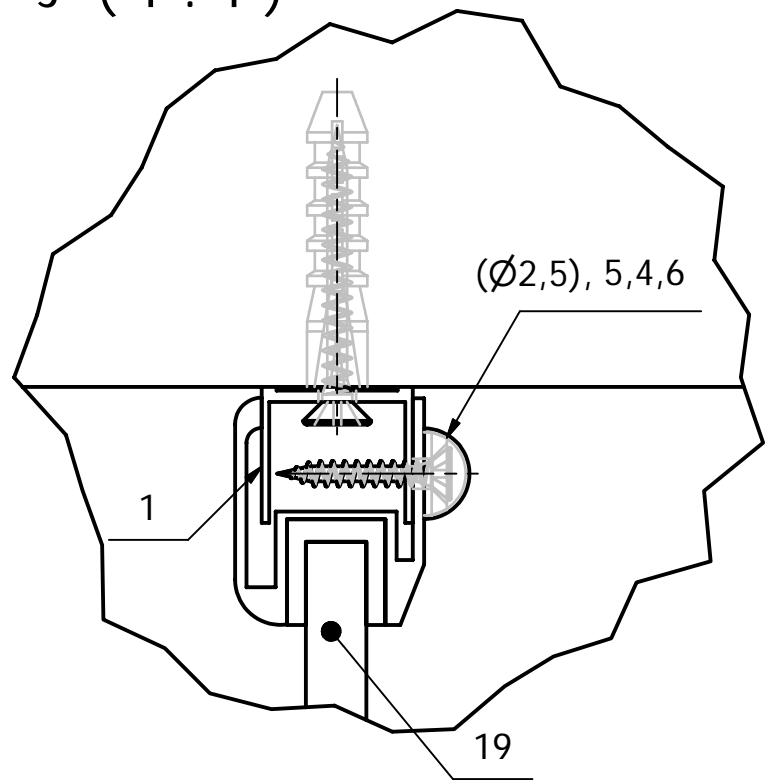



K (1:1)


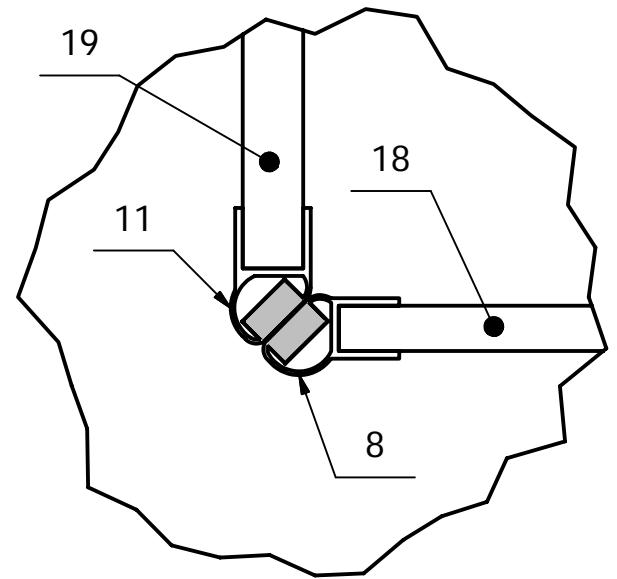


L (0,60:1)

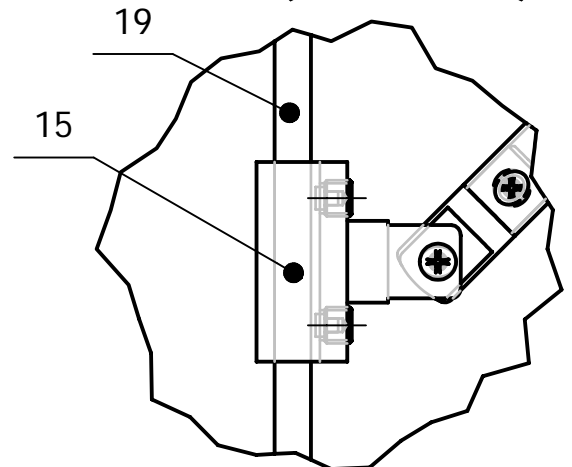


M (0,60:1)

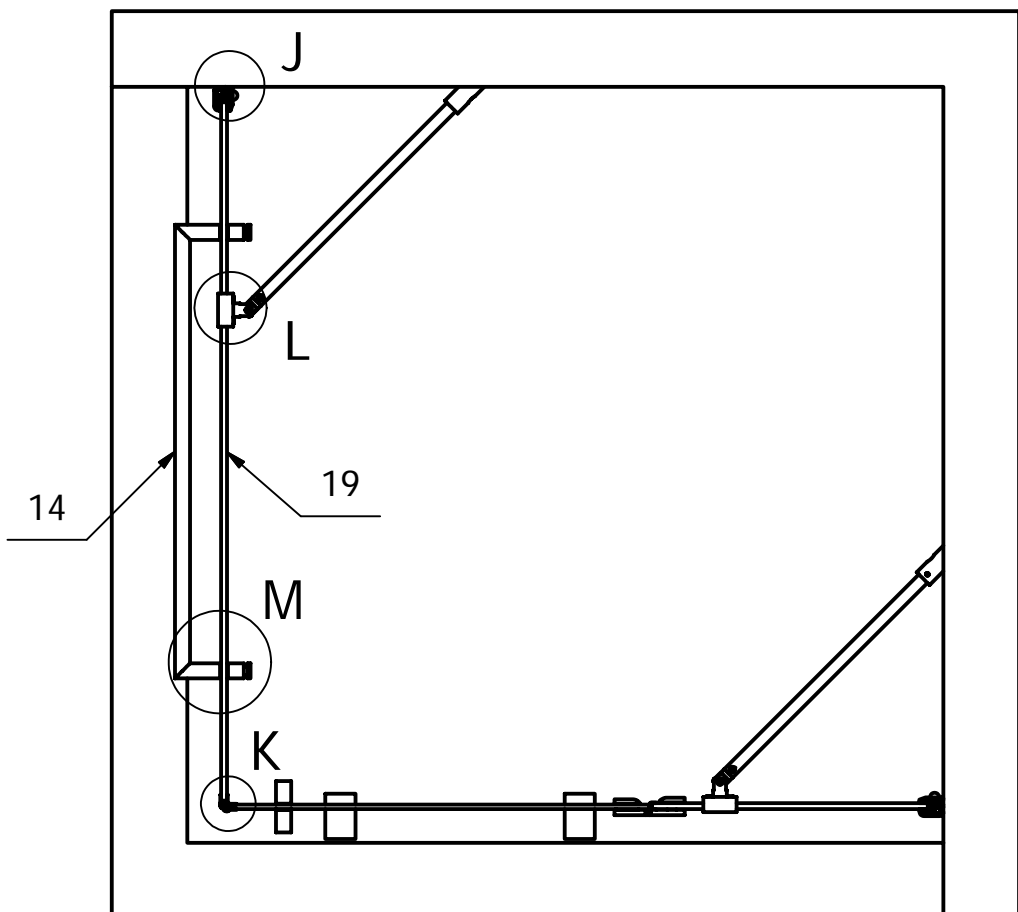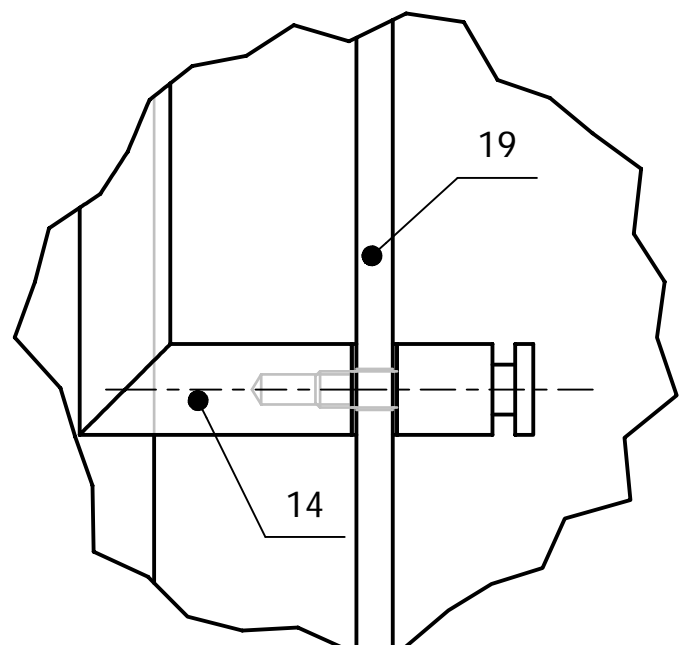


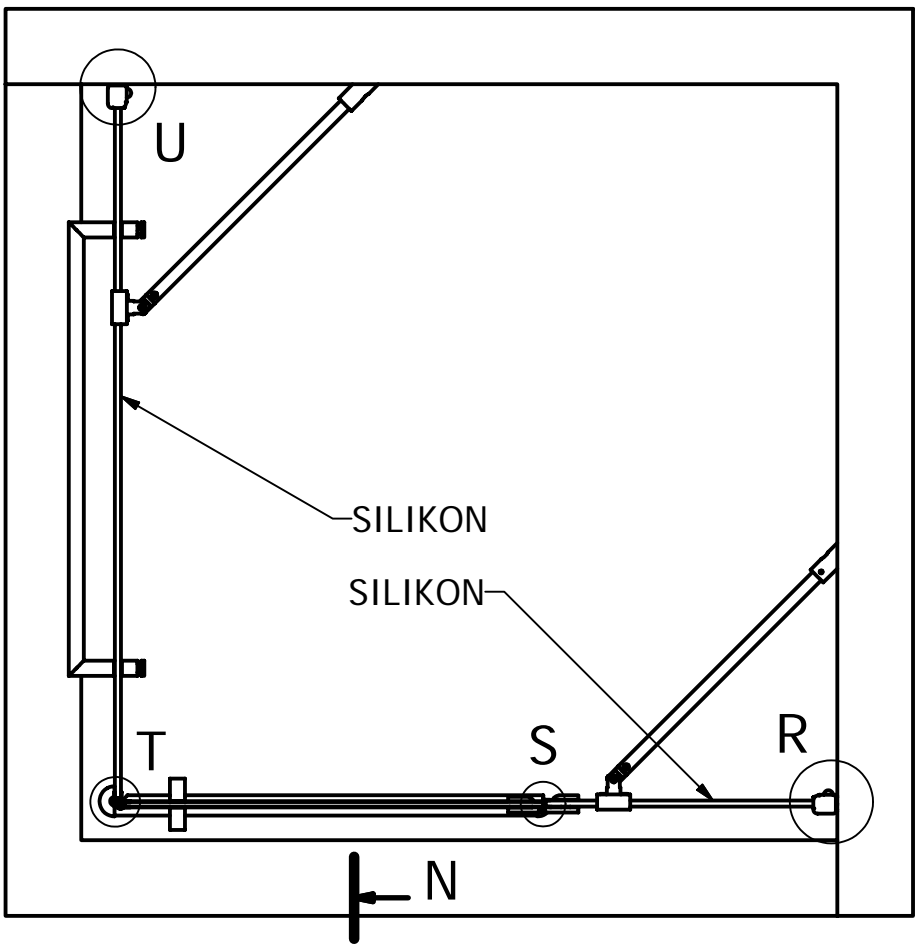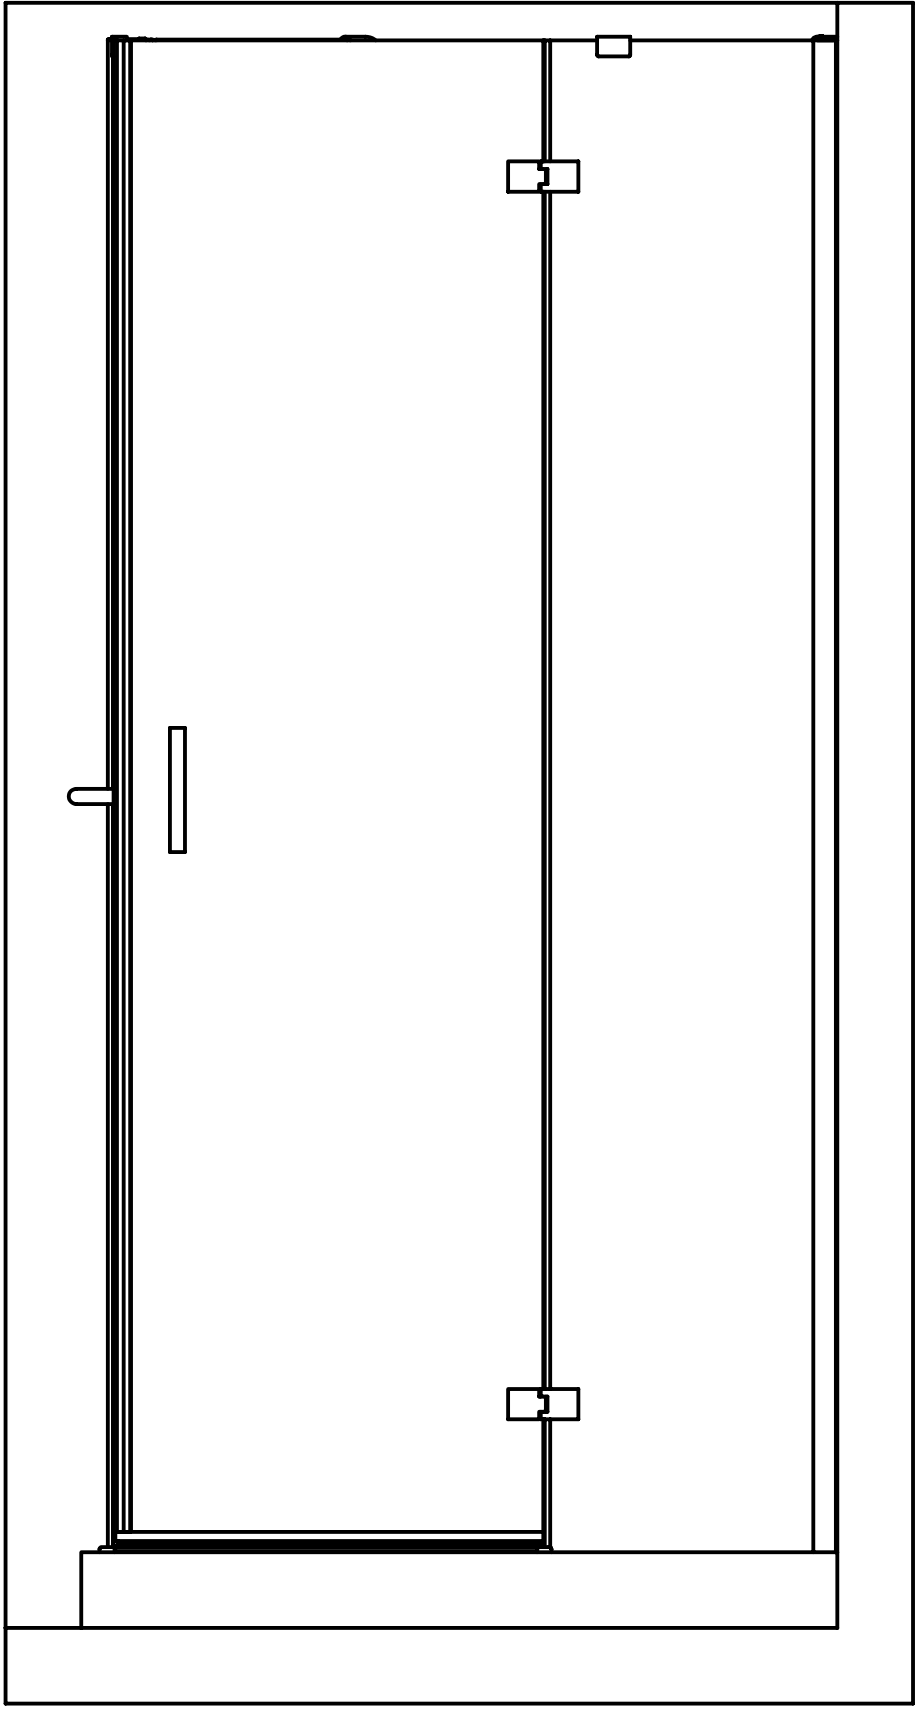


N (1:1)

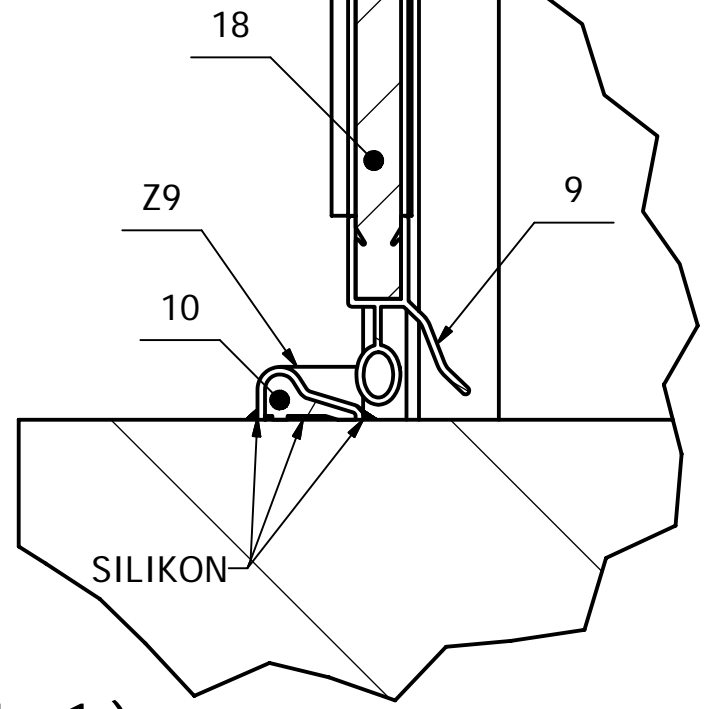


R (1:1)

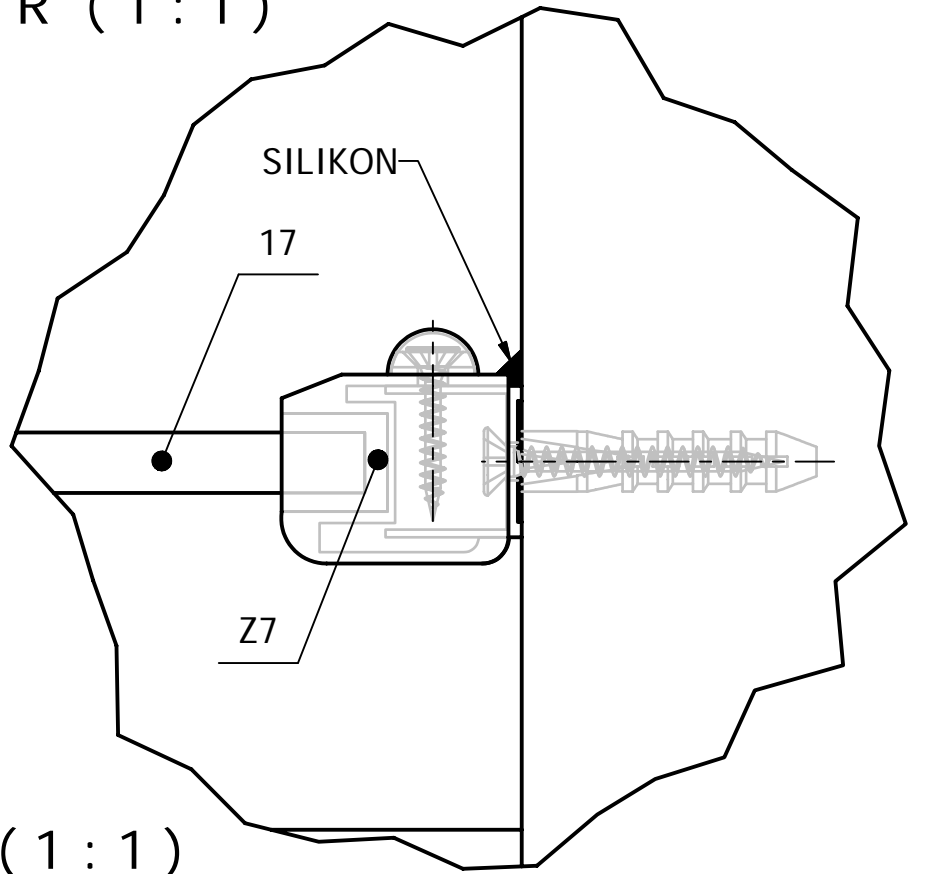

S (1:1)

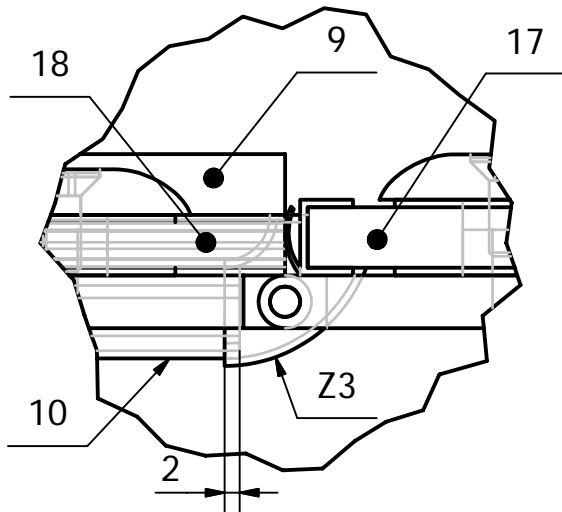

T (1:1)

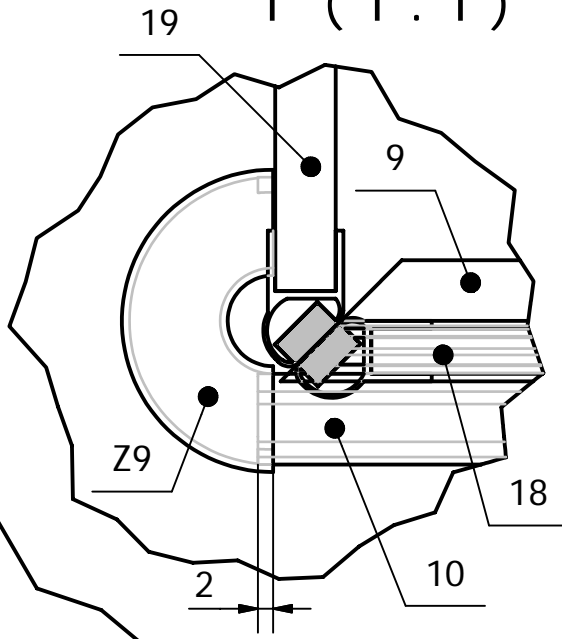

U (1:1)

